BETRIEBSANLEITUNG

INSTRUCTION MANUAL

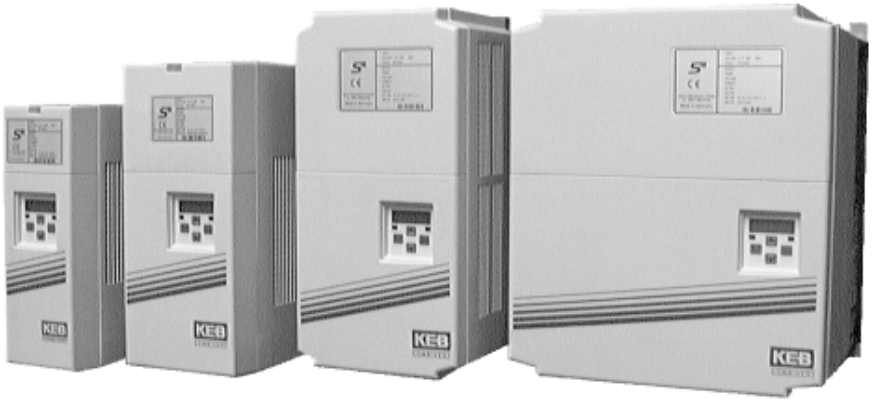

2

KEB COMBIVERT S4 **Größe D / E / G / H / R / U**

Size D / E / G / H / R / U

00.S4.01B-K141

STOP

Erst Betriebsanleitung Teil 1 lesen!

Read Instruction manual part 1 first!

KEB

1/2004

Diese Betriebsanleitung
– ist gültig für das Servosystem **KEB COMBIVERT S4**
– muß jedem Anwender zugänglich gemacht werden

Vor jeglichen Arbeiten muß sich der Anwender mit dem Gerät vertraut machen. Darunter fällt insbesondere die Kenntnis und Beachtung der Sicherheits- und Warnhinweise. Lesen Sie deshalb unbedingt die "Technische Dokumentation Teil 1".

Damit beim KEB COMBIVERT S4 trotz umfangreicher Program-miermöglichkeiten eine einfache Bedienung und Inbetriebnahme möglich ist, wurde eine spezielle Bedienerebene geschaffen, in der die wichtigsten Parameter zusammengefaßt sind. Sollten jedoch die von KEB vordefinierten Parameter nicht ausreichen um Ihren Einsatzfall zu lösen, können Sie gegen eine geringe Schutzgebühr ein **Applikationshandbuch** erwerben.
Es umfaßt: - Erstellen einer individuellen Bedienerebene
- Aufstellung und Beschreibung weiterer Parameter

Die in dieser Betriebsanleitung verwendeten Pictogramme entsprechen folgender Bedeutung:

Gefahr
Warnung
Vorsicht

Wird verwendet, wenn Leben oder Gesundheit des Benutzers gefährdet sind oder erheblicher Sachschaden auftreten kann.

Achtung

Unbedingt beachten! Besondere Hinweise für den sicheren und störungsfreien Betrieb.

Information

Hilfestellung, Tip

This manual
– is valid for the frequency inverter **KEB COMBIVERT F4-F**
– must be made available to every user

Before working with this unit you must familiarize yourself with it. Pay special attention to the safety and warning guides. Make sure to read 'Technical Documentation Part 1'!

KEB COMBIVERT S4 has very extensive programming options. To make the operation and start-up simpler for the user, a special operator level was created in which the most important parameters are found. However, if the parameters pre-defined by KEB are not sufficient for your application an **application manual** is available for a small fee.
It includes: - Creating an individual operator level
- Listing and description of other parameters

The pictograms used in this manual mean:

Danger
Warning
Caution

Used when the life or health of the user is exposed to danger or when considerable damage to property can occur.

Attention

Must be observed! Special instructions for a safe and trouble-free operation.

Information

Assistance, Tip

1. Einführung 4
1.1 Verwendungszweck 4
1.2 Typenschlüssel 4

2. Betriebsbestimmungen 5
2.1 Bewegte bzw. rotierende Teile 5
2.2 Hohe Betriebstemperaturen 5
2.3 Anschlußhinweise 5
2.4 Störschutz des Servostellers 6
2.5 Störschutz elektrischer Anlagen 7
2.6 Betriebshinweise 7

3. Schaltschrankeinbau 8
3.1 Umweltbedingungen 8
3.2 Einbauhinweise 8
3.3 Berechnungen 9
3.4 Mindestabstände 9

4. Technische Daten 10
4.1 230V-Klasse 10
4.2 400V-Klasse 10
4.3 Überlastverhalten 12

5. Abmessungen 13

6. Anschluß 14
6.1 Übersicht Gehäusegrößen 14
6.2 Leistungsteilanschlüsse 15
6.3 Anschluß 16
6.3.1 Anschluß 1-phasig 230V 16
6.3.2 Anschluß 3-phasig 400V 17
6.4 Inkrementalgebernachbildung 18
6.5 Anschluß Resolver 18
6.6 Anschluß SIN/COS-Geber Option 19
6.7 Kabel 19
6.8 Steuerklemmleiste X1 20
6.8.1 Digitale Ein-/Ausgänge 21
6.8.2 Analoge Ein-/Ausgänge 21
6.8.3 Ausgangsrelais 21

7. Bedienung 22
7.1 Parameterstruktur 22
7.2 Parameterübersicht 22
7.3 Parameter anwählen und verändern 23
7.4 Parameterwert speichern 23
7.5 Fehlermeldung 23

8. Parameterbeschreibung 24

9. Drive-Mode 35
9.1 Einstellmöglichkeiten 35
9.2 Bedingung 35
9.3 Anzeige und Tastatur 35
9.4 Sollwertanzeige und -vorgabe 35
9.5 Drehrichtungsvorgabe 36
9.6 Start / Stop / RUN 36

10. Zubehör 37
10.1 Bremswiderstand 37
10.1.1 Artikelnummer 37
10.1.2 Technische Daten 37
10.1.3 Abmessungen 38
10.1.4 Anschluß 38
10.2 Unterbau-Bremswiderstand 39
10.2.1 Abmessungen 39
10.3 Funkentstörfilter 40
10.3.1 Technische Daten 40
10.3.2 Anschluß 40
10.4 Bedienoperator 41

11. Einstellhilfe Drehzahlregler 42

12. Fehlerdiagnose 43

13. Passwörter 45

1. Einführung

D

1.1 Verwendungszweck

Der digitale Servosteller KEB COMBIVERT S4 dient ausschließlich zur Steuerung und Regelung von Sychron-Servomotoren KEB COMBIVERT SM.

Die Steller sind bei Auslieferung auf die von KEB gelieferten Servomotoren abgestimmt. Zusammen erhalten Sie so einen hochdynamischen geregelten Antrieb, der für Standardanwendungen innerhalb kürzester Zeit angeschlossen und betriebsbereit ist.

Der Betrieb anderer Motoren erfordert eine Anpassung des Stellers und ist nur mit besonderen Kenntnissen der Regelungstechnik zu empfehlen.

1.2 Typenschlüssel Servosteller

Größe Typ Ausführung Variante

A B . S 4 . C D E - F G H I

AB Baugröße / Baulänge
siehe Teil 3

C Gehäuseausführung: D, E, G oder H

D Anschlußspannung
0 ... 200V-Klasse DC-Variante
1 ... 400V-Klasse DC-Variante
2 ... 200V-Klasse
3 ... 200V-Klasse mit 3 PH Funkentstörung
4 ... 400V-Klasse

E Mechanische Ausführung des Motors
Motorbaureihe siehe Teil 3

F Motorbemessungsdrehzahl

1 ... 1500 UPM	3 ... 3000 UPM	5 ... ------- UPM
2 ... 2000 UPM	4 ... 4000 UPM	6 ... 6000 UPM

G 0 ... mit Selbstkühlung
1 ... mit Fremdkühlung

HI 09 ... Resolver / SSI
10 ... Resolver / SSI / Funkentstörung
11 ... Resolver / IG-IO / Funkentstörung
12 ... Resolver / IG-IO
13 ... ERN1387 / IG-IO
14 ... ERN1387 / IG-IO / Funkentstörung
15 ... ERN1188 / IG-IO
16 ... ERN1188 / IG-IO / Funkentstörung

D

2. Betriebsbestimmungen

2.1 Bewegte bzw. rotierende Teile

– Motorwelle
– Vorschubachsen und damit zusammenhängende Teile

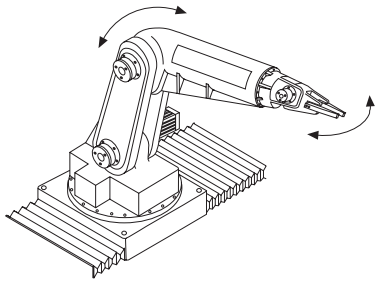

Vor jeglichen Arbeiten an der Maschine (z.B. Austausch von Werkzeugen), Maschine ausschalten und gegen ungewollten Wiederanlauf sichern!

Bewegungsbereich der Maschine während des Betriebes gut absichern! Verletzungsgefahr!

2.2 Hohe Betriebstemperaturen

– Gehäuse des Servomotors
– Bremswiderstände



Motorgehäuse und Bremswiderstände können sehr hohe Betriebstemperaturen erlangen! Verletzungsgefahr!

2.3 Anschlußhinweise

Ein störungsfreier und sicherer Betrieb des Servosystems ist nur unter Beachtung der unten aufgeführten Anschlußhinweise gewährleistet. ***Bei Abweichungen von diesen Vorgaben können im Einzelfall Fehlfunktionen und Schäden auftreten.***

– Der Servosteller KEB COMBIVERT S4 ist für einen festen Anschluß bestimmt.
– Netz- und Motorleitungen nicht vertauschen.
– Steuer- und Leistungsleitungen getrennt verlegen (min. 10 cm Abstand).
– Anschluß der Steuerleitungen nur an Schalt- und Einstellelemente (Relais, Schalter, Potentiometer), die für Kleinspannungen geeignet sind.
– Abgeschirmte/verdrillte Steuerleitungen verwenden. Schirm nur einseitig am Servosteller auf PE legen.

– Abgeschirmte Motorleitungen verwenden. Schirm am Servosteller auf PE und großflächig am Motorgehäuse auflegen.
– Servosteller gut erden: Sternförmig erden; Erdschleifen vermeiden; kürzeste Verbindung zur Haupterde

Die Anschlüsse der Steuerklemmleiste sowie Gebereingänge weisen sichere Trennung gemäß VDE 0100 auf. Der Errichter von Anlagen oder Maschinen hat sicherzustellen, daß bei einem vorhandenen oder neu verdrahteten Stromkreis mit sicherer Trennung die VDE - Forderungen erfüllt bleiben.

2.4 Störschutz des Servostellers

Die Steuer- und Leistungseingänge des Servostellers sind gegen Störeinflüsse geschützt. ***Eine höhere Betriebssicherheit des Gerätes und zusätzlicher Schutz vor Funktionsstörungen wird durch folgende Maßnahmen erreicht:***

– Einsatz von Netzfiltern, wenn die Netzspannung durch das Zuschalten großer Verbraucher (Kompensationsanlagen, HF-Öfen usw.) beeinflußt wird.
– Schutzbeschaltung von induktiven Verbrauchern (Magnetventile, Schütze, Elektromagnete) durch RC-Glied o.ä., um die durch das Abschalten freiwerdenden Energien zu absorbieren.
– Leitungsverlegung, wie bei den Anschlußhinweisen beschrieben, um induktive und kapazitive Einkopplung von Störimpulsen zu vermeiden.
  Paarige Verdrillung schützt gegen induktiv eingekoppelte Störspannungen, Abschirmung schützt gegen kapazitiv eingekoppelte Störspannungen. Verdrillte und abgeschirmte Leitungen ergeben bei getrennter Verlegung von Signal- und Leistungsleitungen einen optimalen Schutz.

D

2.5 Störschutz elektrischer Anlagen

Der Servosteller KEB COMBIVERT S4 sendet elektromagnetische Wellen hoher Frequenz aus. Entstehende Störimpulse, die evtl. elektrische Anlagen in der Umgebung stören, können durch folgende Maßnahmen verringert werden:

- Einbau des Servostellers in ein Metallgehäuse
- abgeschirmte Motorleitungen
  Der Schirm muß am Servosteller an PE und am Motor an das Gehäuse angeschlossen werden (großflächig auflegen). Die Abschirmung darf nicht als Schutzerdung benutzt werden. Die sichere Funktion der Abschirmung ist nur dann gegeben, wenn sie nicht unterbrochen ist und möglichst nahe am Servosteller bzw. Servomotor beginnt.
- gute Erdung (Masseband oder 10 mm^2 Erdleitung)
- Einsatz von Funkstörspannungsfiltern

2.6 Betriebshinweise

Um eine frühzeitige Alterung bzw. Zerstörung des Servosytems KEB COMBIVERT S4 zu vermeiden, beachten Sie folgende Hinweise:

- Leistungstrennschalter zwischen Spannungsversorgung und Servosteller installieren, damit eine unabhängige Abschaltung des KEB COMBIVERT S4 möglich ist.
- Häufiges Schalten zwischen Netz und Servosteller ist nicht zulässig!
- Das Schalten zwischen Motor und Servosteller während des Betriebes ist verboten!
- Das Servosystem KEB COMBIVERT S4 unter geeigneten Bedingungen betreiben (siehe Umweltbedingungen).

3. Schaltschrank-einbau

Aufstellhöhe max. 2000 m –– Bei Aufstellhöhen über 1000 m ist eine Leistungsreduzierung von 1% pro 100 m zu berücksichtigen, d.h. 1500 m NN = 95% P_{Nenn}

D

3.1 Umweltbedingungen

Max. zulässige Grenzwerte:	Servosteller KEB COMBIVERT S4
Kühlmitteleintritts- / Umgebungstemperatur	-10 °C…+45 °C
Lagerungstemperatur	-25 °C…+70°C
Transporttemperatur	-25 °C…+70°C
Relative Luftfeuchte	max. 95 %, keine Betauung (Kennbuchstabe "F" DIN 40040) Klima Kategorie 3K3

3.2 Einbauhinweise

– Servosteller KEB COMBIVERT S4 stationär installieren und erden.
– Bei der Plazierung des Servostellers Mindestabstände zu umliegenden Elementen beachten (siehe Einbaubedingungen).
– Es darf kein Nebel oder Wasser in den Servosteller eindringen.
– Das Eindringen von Staub in den Servosteller vermeiden. Bei Einbau in ein staubdichtes Gehäuse ist auf ausreichende Wärmeabfuhr zu achten.
– Das Servosystem KEB COMBIVERT S4 ***nicht*** in Ex-geschützten Räumen betreiben!
– Ausreichende Wärmeabstrahlung des Servomotors sicherstellen.
– Servosteller gegen aggressive Gase und Flüssigkeiten schützen.

Verbraucher, die elektrische oder magnetische Felder erzeugen oder Einflüsse auf die Spannungsversorgung nehmen, sind möglichst weit entfernt zu plazieren und Maßnahmen zur Unterdrückung der Einflüsse vorzunehmen.

D

3.3 Berechnungen

Berechnung der Schaltschrankoberfläche: $A = \frac{P_V}{T \cdot K}$ [m²]

Luftdurchsatz bei Ventilatorkühlung: $V = \frac{3{,}1 \cdot P_V}{T}$ [m³/h]

A = Schaltschrankoberfläche [m²]

T = Temperaturdifferenz [K] (Standardwert = 20 K)

K = Wärmedurchgangszahl $\left[\frac{W}{m^2 \cdot K}\right]$ (Standardwert = 5 $\frac{W}{m^2 \cdot K}$)

P_V = Verlustleistung [W]

V = Luftdurchsatz des Ventilators [m³/h]

Nähere Angaben entnehmen Sie bitte den Katalogen der Schaltschrankhersteller.

3.4 Mindestabstände

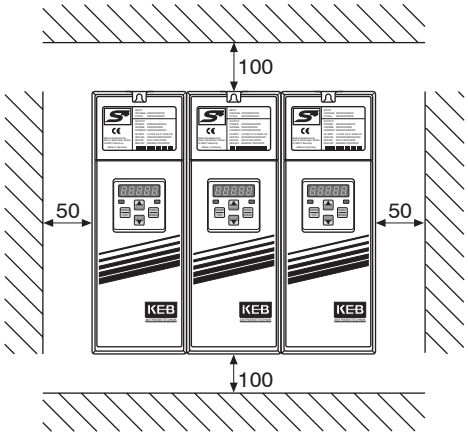

Mindestabstände

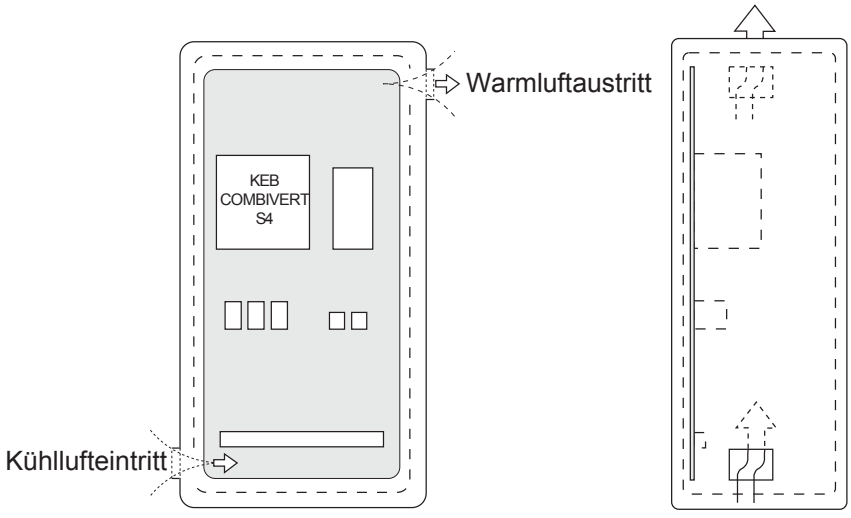

4. Technische Daten

Temperaturbereiche Betrieb	-10° ... +45°C; Lagerung: -25° ... +70°C
Schutzart	IP20

D

Die Schutzart ist nur bei vorschriftsmäßigem Einbau und Anschluß der Komponenten gewährleistet.

4.1 230V-Klasse

Größe		03		05		14
Gehäuse		D		D		G
Netzspannung [1]	[V]	180 . . . 260 ± 0%				
Netzfrequenz	[Hz]	50 / 60 Hz ± 2 Hz				
Netzphasen		1	3	1	3	3
Eingangsstrom	[A]	4,8	2,6	12,8	7	36
Max.zul. Netzsicherung [3]	[A]	16	10	16	10	50
Ausgangsnennstrom	[A]	2,4		6,4		33
Stillstandsdauerstrom I_{do}	[A]	6,4		6,4		33
Spitzenstrom I_{max} [4]	[A]	8,5 für 1200 ms		14,8 für 600 ms		49,5 für 1000 ms
Leitungsquerschnitt [2]	[mm²]	1,5		1,5		280
Verlustleistung P_V [5]	[W]	65		75		100

[1] Bezogen auf 230V Nennspannung.

4.2 400V-Klasse

Größe		07	10
Gehäuse		D	D
Netzspannung [1]	[V]	305 . . . 500 ± 0%	
Netzfrequenz	[Hz]	50 / 60 Hz ± 2 Hz	
Netzphasen		3	3
Eingangsstrom	[A]	3	7
Max.zul. Netzsicherung [3]	[A]	10	10
Ausgangsnennstrom	[A]	2,7	6,4
Stillstandsdauerstrom I_{do}	[A]	2,7	6,4
Spitzenstrom I_{max} [4]	[A]	8,5 für 200 ms	22 für 200 ms
Leitungsquerschnitt [2]	[mm²]	1,5	1,5
Verlustleistung P_V [5]	[W]	95	110

[1] Bezogen auf 400V Nennspannung.

[2] Empfohlener Mindestquerschnitt der Netzzuleitung bei Nennleistung und Leitungslänge bis 30 m.

[3] Netzsicherung und Leitungsquerschnitt können auch nach dem Nennstrom des Servomotors ausgelegt werden.

[4] Der Spitzenstrom I_{max} ist ein theoretischer Wert, der zum Ansprechen der Strombegrenzung führt. Die maximale Momentengrenze sollte 10...15 % unterhalb von I_{max} eingestellt werden.

[5] Verlustleistung, bezogen auf den Stillstandsdauerstrom (Verlustleistung Steuerteil ca. 20 W).

D

Größe		12	16
Gehäuse		E	G
Netzspannung [1]	[V]	305 . . . 500 ± 0%	
Netzfrequenz	[Hz]	50 / 60 Hz ± 2 Hz	
Netzphasen		3	3
Eingangsstrom	[A]	18,2	36
Max. zul. Netzsicherung [3]	[A]	20	50
Ausgangsnennstrom	[A]	16,5	33
Stillstandsdauerstrom I_{do}	[A]	16,5	21,5
Spitzenstrom I_{max} [4]	[A]	38 für 600 ms	49,5 für 600 ms
Leitungsquerschnitt [2] [3]	[mm²]	2,5	10
Verlustleistung P_V [5]	[W]	240	310

Größe		18	22	24
Gehäuse		H	R	U
Netzspannung [1]	[V]	305 . . . 500 ± 0%		
Netzfrequenz	[Hz]	50 / 60 Hz ± 2 Hz		
Netzphasen		3		
Eingangsstrom	[A]	55	127	198
Max. zul. Netzsicherung [3]	[A]	80	160	315
Ausgangsnennstrom	[A]	50	115	180
Stillstandsdauerstrom I_{do}	[A]	45	115	180
Spitzenstrom I_{max} [4]	[A]	75 für 800 ms	172,5 für 1000 ms	270 für 1000 ms
Leitungsquerschnitt [2] [3]	[mm²]	25	50	95
Verlustleistung P_V [5]	[W]	610	1500	2400

[1] Bezogen auf 400V Nennspannung.

[2] Empfohlener Mindestquerschnitt der Netzzuleitung bei Nennleistung und Leitungslänge bis 30 m.

[3] Netzsicherung und Leitungsquerschnitt können auch nach dem Nennstrom des Servomotors ausgelegt werden.

[4] Der Spitzenstrom I_{max} ist ein theoretischer Wert, der zum Ansprechen der Strombegrenzung führt. Die maximale Momentengrenze sollte 10...15 % unterhalb von I_{max} eingestellt werden.

[5] Verlustleistung, bezogen auf den Stillstandsdauerstrom (Verlustleistung Steuerteil ca. 20 W).

4.3 Überlastverhalten

D

OL - Funktion
Servosteller

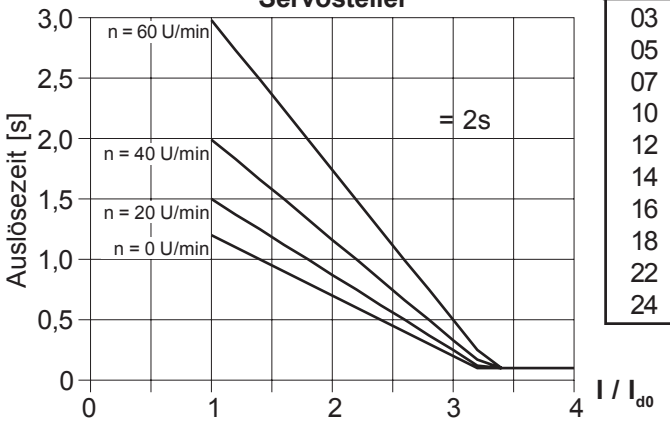

Gerät	I_{d0}	$\frac{I}{I_{d0}}$ max.
03	2,4	1,3
05	6,4	2,3
07	2,7	3,1
10	6,4	3,4
12	16,5	3,0
14	33,0	1,5
16	21,5	2,3
18	45	1,7
22	115	1,5
24	180	1,5

OL - Funktion Überlastbereich

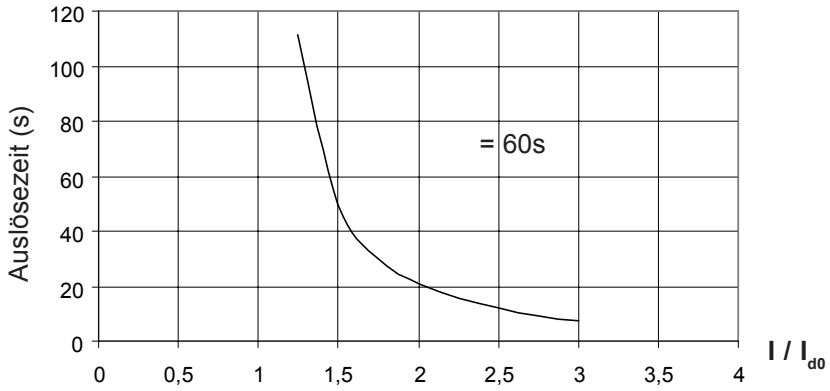

D

5. Abmessungen

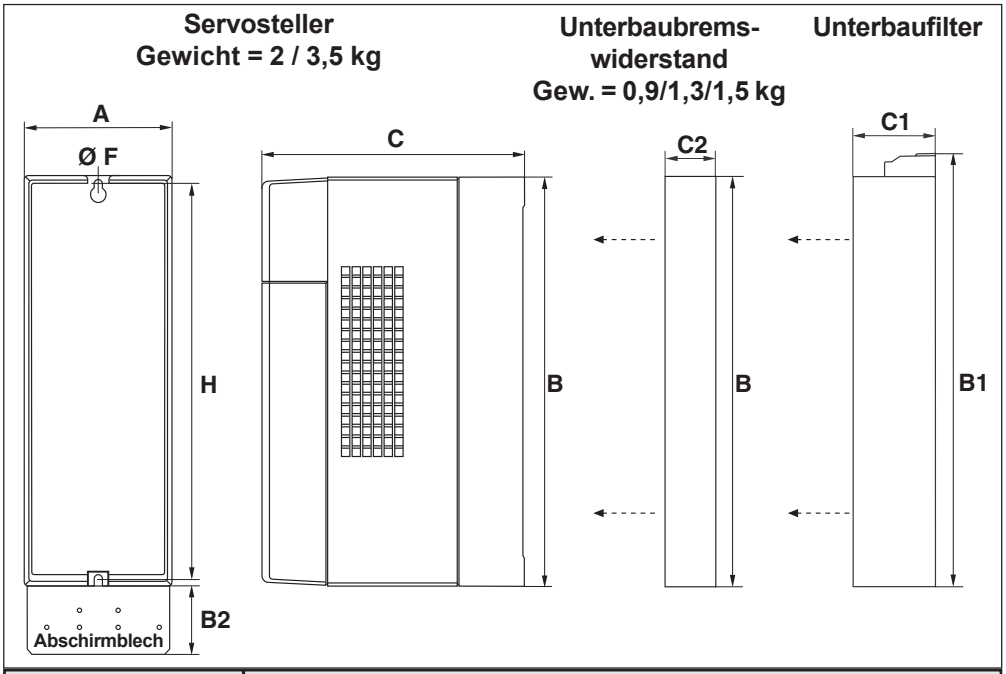

Gehäusegröße	A	B	B1	B2	C	C1	C2	F	H
D	90	250	264	37,5	160	50	30	5	240
E	130	290	352	37,5	200	50	30	7	275

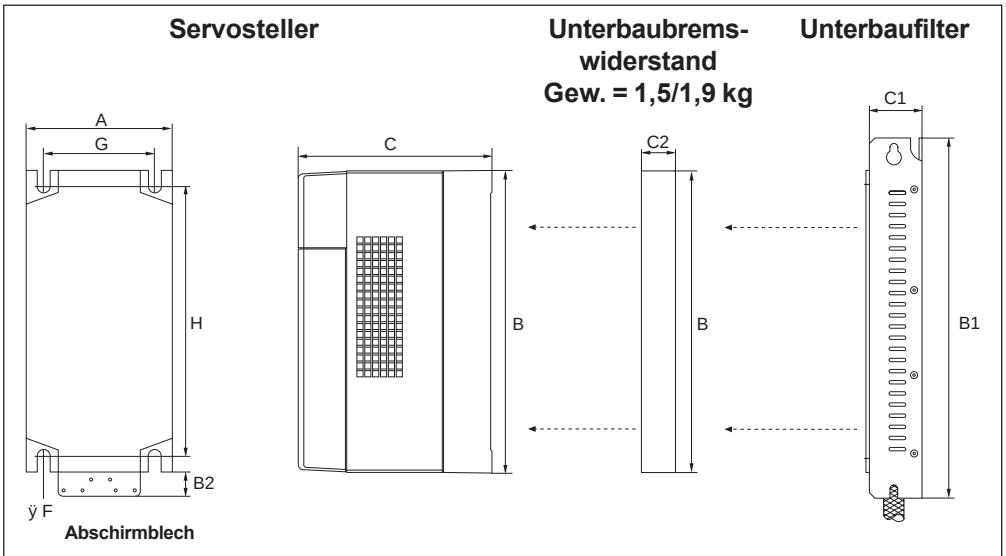

Geh.-Gr.	A	B	B1	B2	C	C1	C2	F	G	H	Gew.
G	170	340	415	32	255	56	30	7	150	330	10
H	297	340	445	51	255	66	-	7	250	330	14
R*	340	520	-	68	355	-	-	10	300	495	25-29
U	340	800	-	-	355	-	-	11	300	775	75

Abmessungen und Gewichte der HF-Filter: siehe Betriebsanleitung 00.F4.00B-K000 (KEB-COMBIVERT F4 Leistungsteil).

*) Für das R-Gehäuse werden Einbaufilter verwendet, die die Abmessungen des Gehäuses nicht beeinflussen. (Gewicht = 7 kg)

6. Anschluß

6.1 Übersicht

D

Gehäusegröße D - E

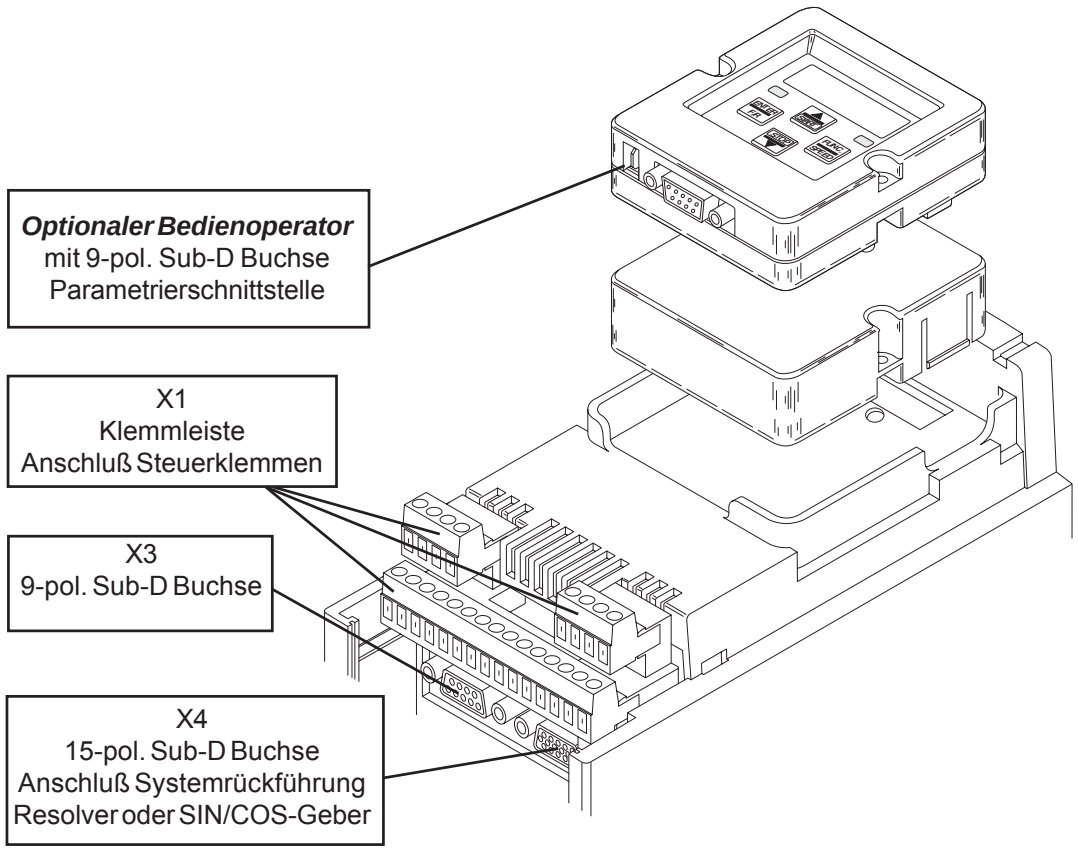

Gehäusegröße G / H / R / U

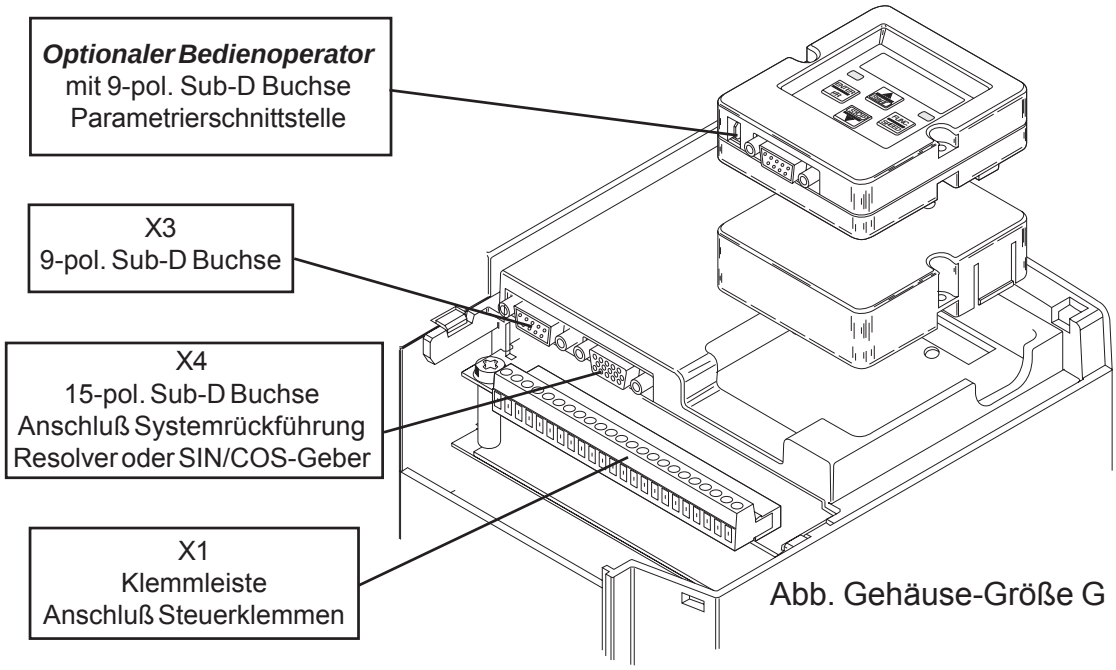

Abb. Gehäuse-Größe G

D

6.2 Leistungsteilanschlüsse

Gehäusegröße D ⚠ **Eingangsspannung beachten, da 230V und 400V-Klasse (3-phasig) möglich**

1-phasig

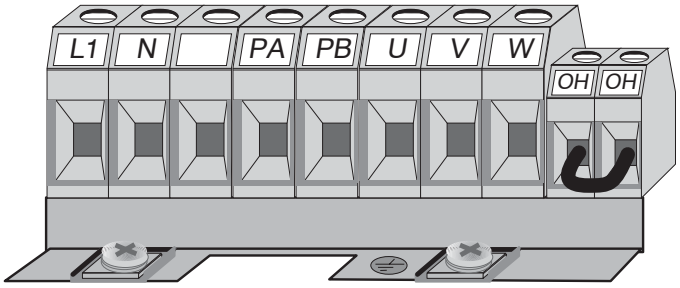

L1, N	1-phasiger Netzanschluß
L1, L2, L3	3-phasiger Netzanschluß
PA, PB	Anschluß für Bremswiderstand

3-phasig

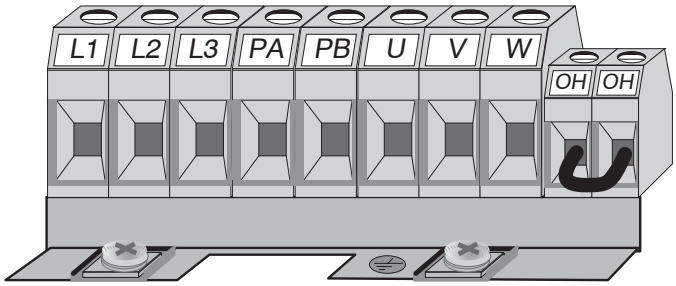

U, V, W	Motoranschluß
OH, OH	Anschluß für Temperatursensor
⏚	Anschluß für Abschirmung/Erdung

Gehäusegröße E

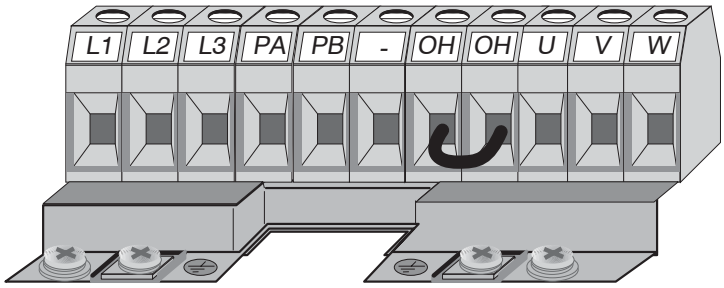

L1, L2, L3	3-phasiger Netzanschluß
PA, PB	Anschluß für Bremswiderstand
PA, -	Anschluß für Bremsmodul und Rückspeiseeinheit
OH, OH	Anschluß für Temperatursensor
U, V, W	Motoranschluß
⏚	Anschluß für Abschirmung/Erdung

Gehäusegröße G

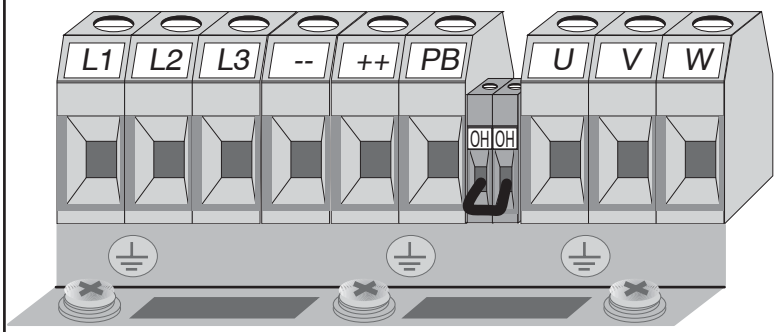

L1, L2, L3	3-phasiger Netzanschluß
++, PB	Anschluß für Bremswiderstand
++, --	Anschluß für Bremsmodul, Rückspeise- und Versorgungseinheit Gleichspgs.eingang 420...720VDC
OH, OH	Anschluß für Temperatursensor
U, V, W	Motoranschluß
⏚	Anschluß für Abschirmung/Erdung

Geräte ohne Gleichspannungseingang

+PA, PB	Anschluß für Bremswiderstand
+PA, -	Anschluß für Bremsmodul und Rückspeiseeinheit

Gehäusegröße H

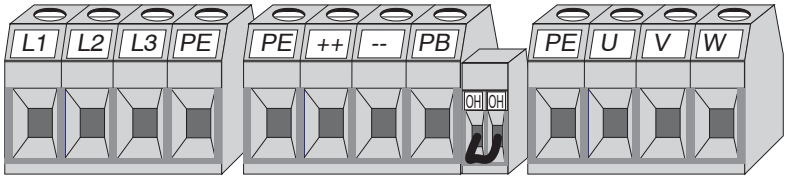

L1, L2, L3	3-phasiger Netzanschluß
++, PB	Anschluß für Bremswiderstand
++, --	Anschluß für Bremsmodul, Rückspeise- und Versorgungseinheit Gleichspgs.eingang 420...720V DC
OH, OH	Anschluß für Temperatursensor
U, V, W	Motoranschluß
PE	Anschluß für Abschirmung/Erdung

D

Gehäusegröße R und U

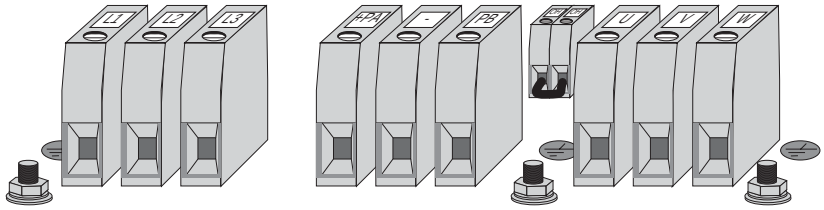

L1, L2, L3	3-phasiger Netzanschluß
+PA, PB	Anschluß für Bremswiderstand
+PA, -	Anschluß für Bremsmodul und Rückspeiseeinheit
OH, OH	Anschluß für Temperatursensor
U, V, W	Motoranschluß
⏚	Anschluß für Abschirmung/Erdung

Der Leistungsstecker darf nur bei ausgeschaltetem Gerät und ausgeschalteter Spannungsversorgung gezogen / gesteckt werden!
Auf phasenrichtigen Anschluß des Servomotors achten!

6.3 1-phasiger Anschluß 230 V-Klasse

PE	Schutzleiter
U, V, W	Motor
L1, L2	Netzanschluß 1-phasig
PA, PB	Anschluß Bremswiderstand

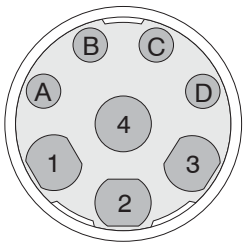

Servomotor
Leistungsstecker

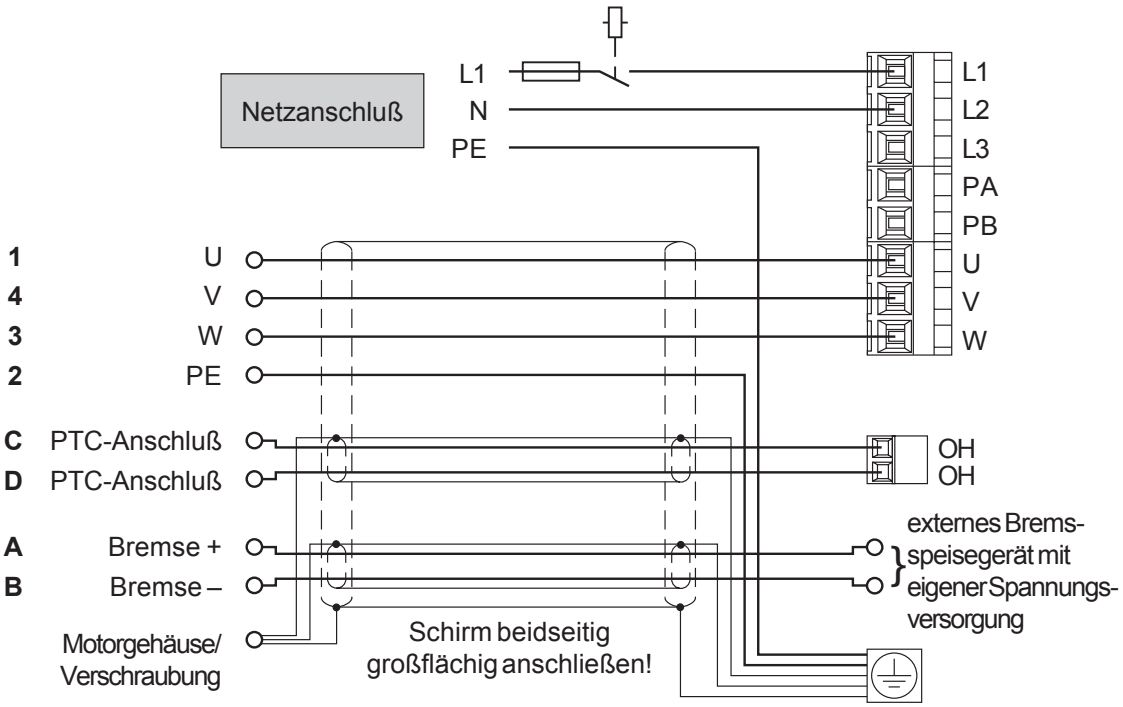

Stecker Kontakt Nr.	Bezeichnung	Kabel Ader Nr.
1	U	1
4	V	2
3	W	3
2	PE	Grün-Gelb
A	Bremse +	5
B	Bremse –	6
C	PTC-Kontakt	7
D	PTC-Kontakt	8

D

6.4 3-phasiger Anschluß 230 V/400 V-Klasse

Anschlußspannung des Servostellers (3 x 230 V / 3 x 400 V) unbedingt beachten!

Der Leistungsstecker darf nur bei ausgeschaltetem Gerät und ausgeschalteter Spannungsversorgung gezogen / gesteckt werden !

Auf phasenrichtigen Anschluß des Servomotors achten!

PE	Schutzleiter
U, V, W	Motor
L1, L2, L3	Netzanschluß 3-phasig
PA, PB	Anschluß Bremswiderstand

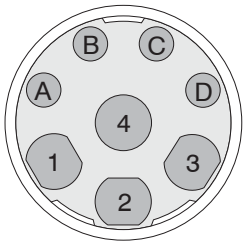

Servomotor
Leistungsstecker

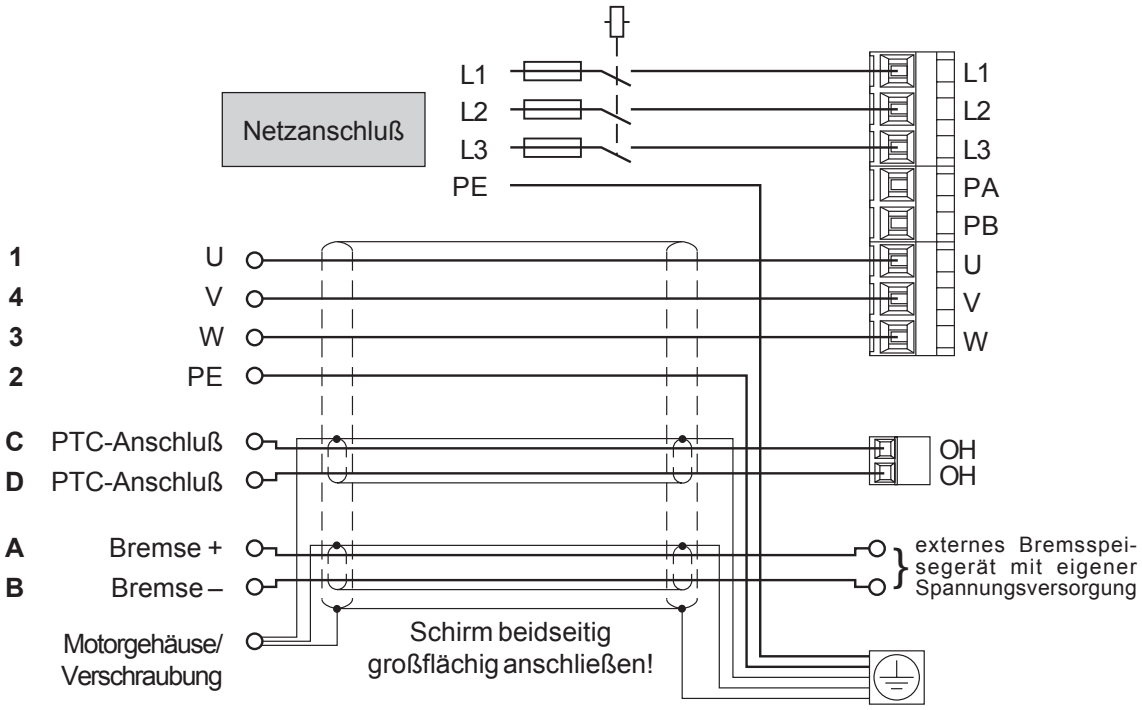

Stecker Kontakt Nr.	Bezeichnung	Kabel Ader Nr.
1	U	1
4	V	2
3	W	3
2	PE	Grün-Gelb
A	Bremse +	5
B	Bremse –	6
C	PTC-Kontakt	7
D	PTC-Kontakt	8

D

6.5 Anschluß Inkrementalgeber-nachbildung

Die Geberschnittstelle X3 ist umschaltbar von einer Inkrementalgebernachbildung auf einen Inkrementalgebereingang. Die Strichzahl der Nachbildung beträgt bei Geräten mit Resolverinterface immer 1024 Inkremente. Bei Geräten mit SIN/COS Interface wird die Strichzahl des SIN/COS - Gebers verwendet.

Maximale Eingangsfrequenz:	< 300 kHz
Signale:	RS 422 / 2 Spursignale und Nullsignal
max. Übertragungsstrecke:	50 m
freigegebene Geber:	Kübler 5800 / 5820 Heidenhain RON 425 / ROD 426 oder kompatible

Servosteller
Sub-D Buchse X3

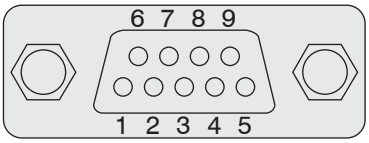

PIN Nr.	Signal	Bedeutung
1	U_{a1}	Signal Kanal A
2	U_{a2}	Signal Kanal B
3	U_{a0}	Signal Null
4	+5V	max. 150 mA (1)
5	+18V	max. 100 mA (1)
6	$\overline{U}_{a1}$	Signal Kanal A invertiert
7	$\overline{U}_{a2}$	Signal Kanal B invertiert
8	$\overline{U}_{a0}$	Signal Null invertiert
9	GND	

(1) Die Spannungsversorgung an X3 und X4 kann auf den +18V mit maximal 100 mA belastet werden. Alternativ dazu sind die +5V mit 300 mA belastbar.

Die Stecker dürfen nur bei ausgeschaltetem Gerät und ausgeschalteter Versorgungsspannung gezogen / gesteckt werden!

6.6 Anschluß Resolver

Servosteller
Sub-D Buchse X4

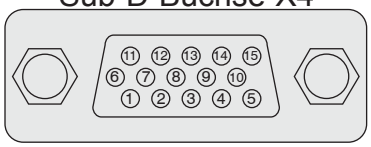

Servomotor
Resolverstecker

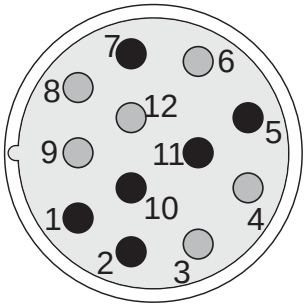

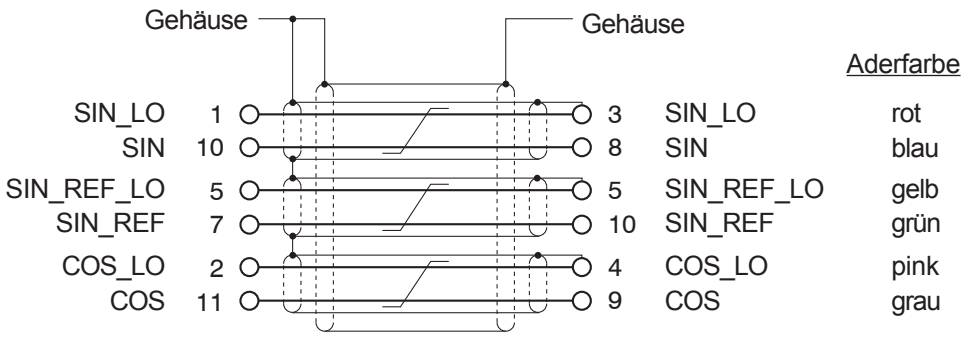

D

6.7 Anschluß SIN/COS-Geber *Option*

Die Stecker dürfen nur bei ausgeschaltetem Gerät und ausgeschalteter Versorgungsspannung gezogen / gesteckt werden !

Servosteller
Sub-D Buchse X4

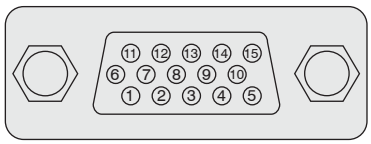

Servomotor
Geberstecker

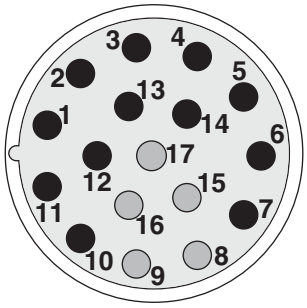

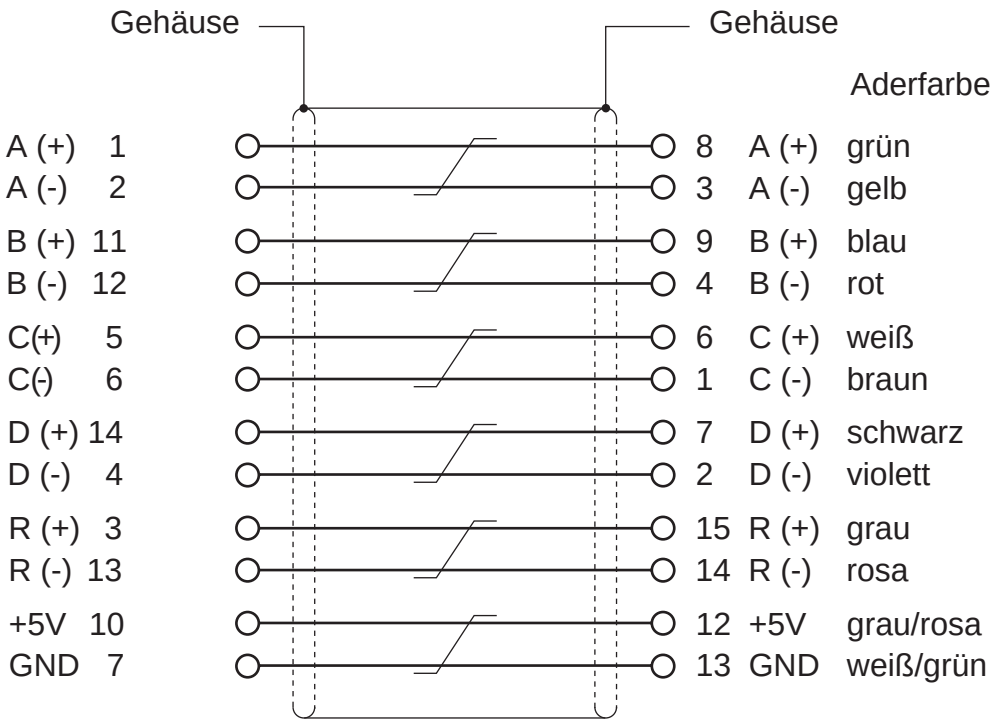

6.8 Kabel

Für das Servosystem KEB COMBIVERT S4 sind anschlußfertige Motor-, Resolver- und Geberkabel in den Längen 5m, 10m, 15m und 20m erhältlich.

00.S4.109–0005

Kabellänge
- 05 = 5 m
- 10 = 10 m
- 15 = 15 m
- 20 = 20 m

Artikel
- 109 = Resolverkabel
- 019 = Motorkabel 1,5 mm²
- 119 = Motorkabel 2,5 mm²
- 209 = Geberkabel ERN1387

Typenbezeichnung 00.S4

Weitere Leitungslängen auf Anfrage.

6.9 Steuerklemmleiste X1

Drehrichtungsfreigabe (Klemme X2.3 / X2.4) und analoge Drehmomentbegrenzung (Klemme X2.16 / X2.17) haben im Drive-Mode keine Funktion. Siehe Seite 35 "Drive-Mode".

D

Klemme	Bezeich-nung	Funktion	
1	ST	Reglerfreigabe (ausgangsspannungslos, wenn geöffnet, kein Moment)	digitale Eingänge : +12…33 V / Ri = 2,7 k PNP potentialgetrennt * Bei defektem Gerät ist das Ansprechen der Softwareschutz-funktion nicht gewährleistet.
2	RST	Reset	
3	F	Drehrichtungsfreigabe (Endschalter*) vorwärts	
4	R	Drehrichtungsfreigabe (Endschalter*) rückwärts	
5	I1	Eingang für Jog-Drehzahl vorwärts	
6	I2	Eingang für Jog-Drehzahl rückwärts	
7	I3	Eingang für externe Fehlervorgabe	
8	D1	digitales Ausgangssignal 1	programmierbare PNP - Transistorausgänge 16V - 30V / max. 60 mA
9	D2	digitales Ausgangssignal 2	
10	Uout	+ 24 V Spannungsausgang	16V - 30V / max. 60 mA bei ext. Versorgung ca. $U_{ext.}$
11	0 V	Masse für +24 V und digitale Ein-/Ausgänge	
12	CRF	+10 V Referenzspannung	+10V (+/- 3%) ; max. 4 mA
13	COM	Masse für analoge Ein-/Ausgänge	
14	REF 1 +	analoge Sollwertvorgabe	Spannungsdifferenzeingang - 10V… + 10V / Auflösung: 12 Bit Ri = 40 k
15	REF 1 –		
16	REF 2 +	analoge Drehmomentbegrenzung ***siehe auch Parameter CP.9***	Spannungsdifferenzeingang 0…+10V Auflösung: 12 Bit; -10V…0V $\hat{=}$ 0 Nm / +10V $\hat{=}$ $M_{max.}$ / Ri = 40 k
17	REF 2 –		
18	A1	programmierbarer Analogausgang 1	-10V…+10V / Auflösung: 10 Bit Ri=100
19	A2	programmierbarer Analogausgang 2	
20	RLA	Ausgangsrelais: RLA / RLC : normaler Betriebszustand RLB / RLC : Netz aus / Störung	30 V DC/1 A
21	RLB		
22	RLC		
23	Ext. Spg.	externe Versorgung der Steuerung	+ 24 V externer Spannungseingang

D

6.9.1 Digitale Ein- / Ausgänge

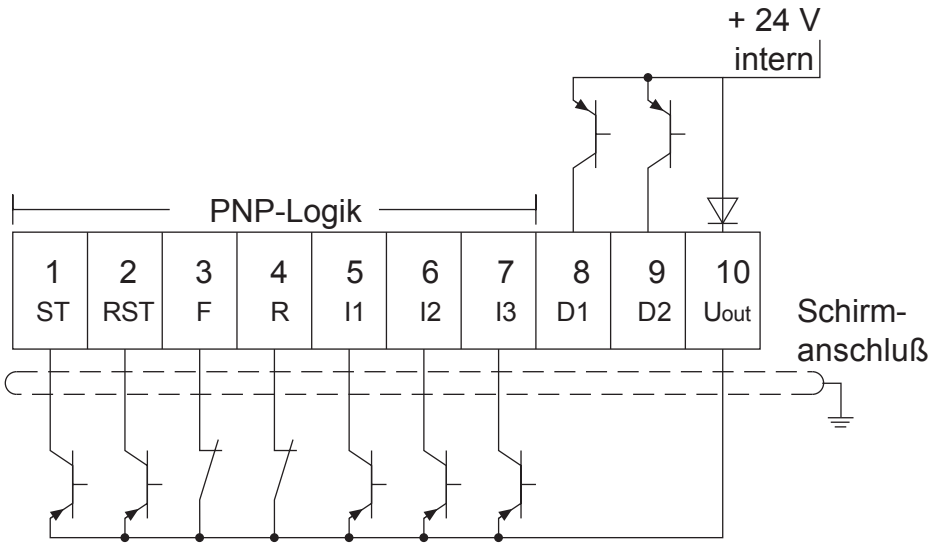

6.9.2 Analoge Ein- / Ausgänge

ohne analoge Drehmoment-begrenzung

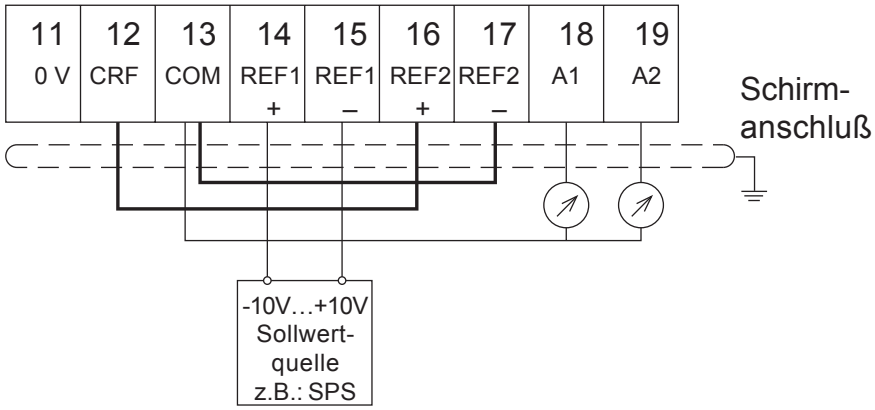

mit analoger Drehmoment-begrenzung

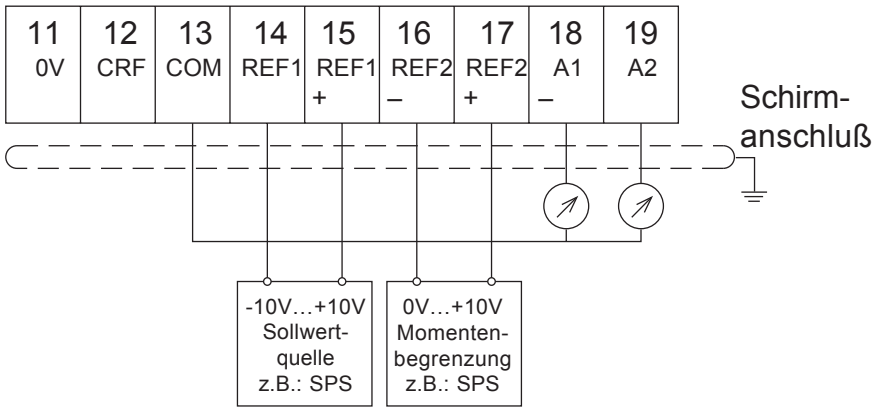

6.9.3 Ausgangsrelais

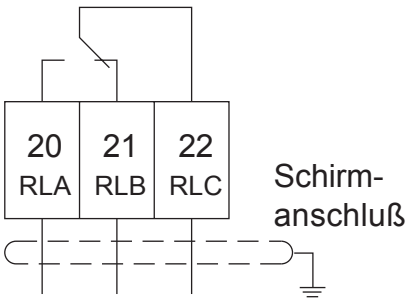

6.8.4 Externe Spannungsversorgung der Steuerung

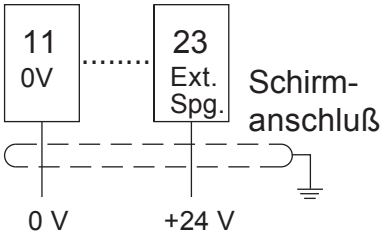

7. Bedienung

7.1 Parameterstruktur

D

CP-Parameter (CP.0 … CP.24)

Nur-Lese-Parameter
sind Parameter, die nur ausgelesen und nicht verändert werden können. **(CP.1…CP.6, CP.14)**

programmierbare Parameter
sind Parameter, die verändert werden können. **(CP.0, CP.7 … CP.13, CP.15 … CP.24)**

NICHT-ENTER-Parameter
sind programmierbare Parameter, die beim Verändern sofort übernommen und gespeichert werden. **(CP.7 … CP.13,CP.16,CP.17, CP.19, CP.20, CP.23, CP.24)**

ENTER-Parameter
sind programmierbare Parameter, deren Änderungen erst nach Betätigen der ENTER-Taste übernommen und gespeichert werden. **(CP.0, CP.15, CP.18, CP.21, CP22)**

7.2 Parameterübersicht

Par.-Nr.	Parameterbezeichnung	Einstellbereich	Auflösung	Werkseinstellung
CP.0	Passworteingabe	0…9999	1	–
CP.1	Istdrehzahlanzeige	–	0,5 U/min	–
CP.2	Statusanzeige	–	–	–
* CP.3	Motorscheinstrom	–	0,1 A	–
* CP.4	max. Motorscheinstrom	–	0,1 A	–
* CP.5	aktuelles Drehmoment	–	0,1 Nm	–
CP.6	Solldrehzahlanzeige	–	0,5 U/min	–
CP.7	Beschleunigungszeit	0…320 s	0,01 s	0,05 s
CP.8	Verzögerungszeit	0…320 s	0,01 s	0,05 s
CP.9	Drehmomentgrenze	0…5 x M_N	0,1 Nm	3 x M_N
CP.10	max. Solldrehzahl	0…9999	0,5 U/min	Nenndrehzahl
CP.11	Jog-Drehzahl	0…9999	0,5 U/min	100 U/min
CP.12	P-Faktor Drehzahlregler	0…65535	1	Motortypabhängig
CP.13	I-Faktor Drehzahlregler	0…65535	1	Motortypabhängig
CP.14	Strichzahl Inkrementalgebernachbildung	–	–	1024/2048 (für sin/cos)
CP.15	Verhalten bei externem Fehler	0…6	1	0
CP.16	Offset REF 1	-100%…+100%	0,1 %	0 %
CP.17	Nullpunkthysterese REF 1	0…10 %	0,1 %	0 %
CP.18	Funktion Ausgang A1	0…6	1	2
CP.19	Verstärkung Ausgang A1	-20…+20	0,01	3 x M_{Nenn} $\hat{=}$ +10V
CP.20	Verstärkung Ausgang A2	-20…+20	0,01	+/–n_{Nenn} $\hat{=}$ +/–10V
CP.21	Schaltbedingung Ausgang D1	0…20	1	20
CP.22	Schaltbedingung Ausgang D2	0…20	1	18
CP.23	Drehmomentpegel Ausgang D1	0…50 Nm	0,1 Nm	0,5 x M_{Nenn}
CP.24	Drehzahlpegel Ausgang D2	0…16000 U/min	0,5 U/min	0,5 x n_{Nenn}

* Bei den angezeigten Istwerten sind aufgrund von Maschinenstreuungen und Temperaturdriften Toleranzen zu berücksichtigen (ca. ± 10% bezogen auf Nennwerte).

CP. 9

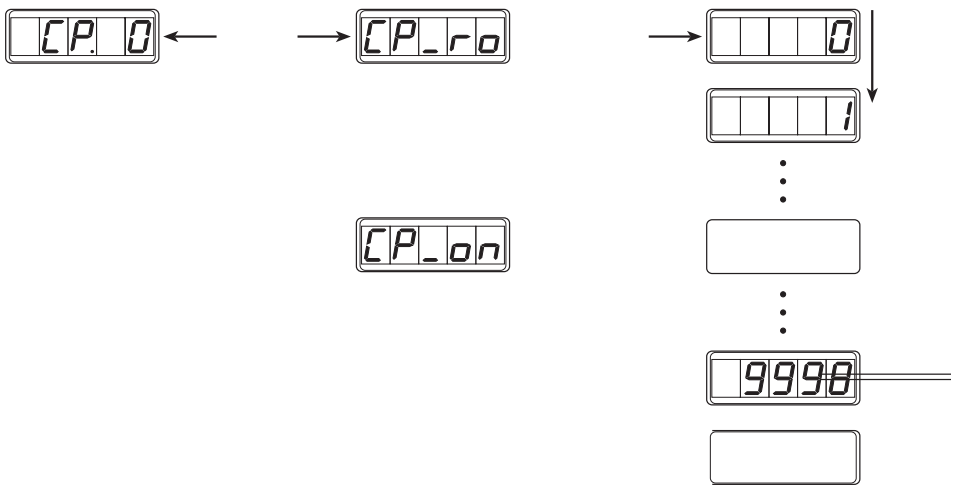
CP. 0
CP_ro
0
1
CP_on
9990



Statusanzeige

Die Statusanzeige zeigt den aktuellen Betriebszustand des Servostellers an. Der aktuelle Betriebszustand wird durch folgende Anzeigen visualisiert :

Betriebszustand **ready:**

noP	0	No Operation	Reglerfreigabe nicht gebrückt, Modulation abgeschaltet, Ausgangsspannung = 0, Antrieb führungslos
LS	70	Low Speed	Reglerfreigabe ist gebrückt, keine Drehrichtung vorgegeben, Modulation abgeschaltet, Ausgangsspannung = 0, Antrieb führungslos

Betriebzustandsgruppe **run :**

Motorscheinstrom

Anzeige des aktuellen Motorscheinstroms in Ampere.

Auflösung: 0,1 A

Motorscheinstrom Spitzenwert

Anzeige des maximalen Motorscheinstroms, der während des Betriebes



Beschleunigungszeit

Der Parameter legt die benötigte Zeit fest, um von 0 U/min auf Nenndrehzahl des Servosystems (3000/4000/6000 U/min) zu beschleunigen. Die tatsächliche Beschleunigungszeit verhält sich dabei proportional zur Drehzahländerung (delta n).

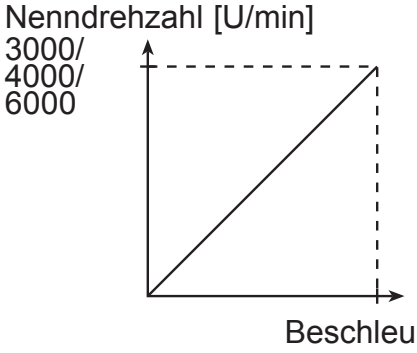

Einstellbereich:	0…320 s
Auflösung:	0,01 s
Werkseinstellung:	0,05 s
Kundeneinstellung:	____ s

$$\frac{\textbf{CP.7}}{\textbf{Nenndrehzahl}} = \frac{\textbf{tats. Beschleunigungszeit}}{\textbf{delta n}}$$

Berechnungsbeispiel:

Berechnung der einzustellenden Beschleunigungszeit:

Der Antrieb soll von 100 U/min auf 2500 U/min in **0,2 s** beschleunigen!
Nenndrehzahl des Antriebs: 3000 U/min

delta n = 2500 U/min – 100 U/min = 2400 U/min

$$CP.7 = \frac{\text{tatsächl. Beschleunigungszeit}}{\text{delta n}} \cdot \text{Nenndrehzahl}$$

$$CP.7 = \frac{0{,}2\text{s}}{2400\ \text{U/min}} \cdot 3000\ \text{U/min} = \mathbf{0{,}25\ s}$$

Für das vorgegebene Beispiel muß CP.7 auf 0,25 s eingestellt werden!

Wenn CP.7 und CP.8 = 0.00 s
dann CP.16 und CP.17 ohne Funktion

Verzögerungszeit

D

Der Parameter legt die benötigte Zeit fest, um von Nenndrehzahl des Servosystems (3000/4000/6000 U/min) auf 0 U/min zu verzögern. Die tatsächliche Verzögerungszeit verhält sich dabei proportional zur Drehzahländerung.

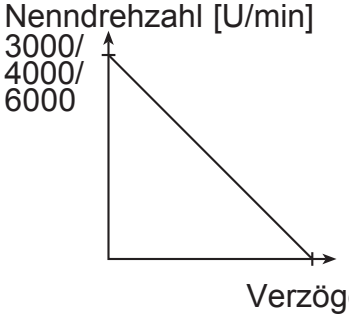

Einstellbereich:	0…320 s
Auflösung:	0,01 s
Werkseinstellung:	0,05 s
Kundeneinstellung:	_____ s

$$\frac{\text{CP.8}}{\text{Nenndrehzahl}} = \frac{\text{tats.Verzögerungszeit}}{\text{delta n}}$$

Berechnungsbeispiel:

<u>Berechnung der einzustellenden Verzögerungszeit:</u>

Der Antrieb soll von 3000 U/min auf 1000 U/min in **0,05 s** verzögern!
Nenndrehzahl des Antriebs: 4000 U/min

delta n = 3000 U/min – 1000 U/min = <u>2000 U/min</u>

$$\text{CP.8} = \frac{\text{tatsächl. Verzögerungszeit}}{\text{delta n}} \bullet \text{Nenndrehzahl}$$

$$\text{CP.8} = \frac{0{,}05\text{s}}{2000\ \text{U/min}} \bullet 4000\ \text{U/min} = \mathbf{\underline{0{,}1\ s}}$$

Für das vorgegebene Beispiel muß CP.8 auf 0,1 s eingestellt werden!

Wenn CP.7 <u>und</u> CP.8 = 0.00 s
dann CP.16 und CP.17 ohne Funktion

Drehmomentgrenze

Mit dem Parameter CP.9 wird das maximal zulässige Drehmoment des Antriebes festgelegt.

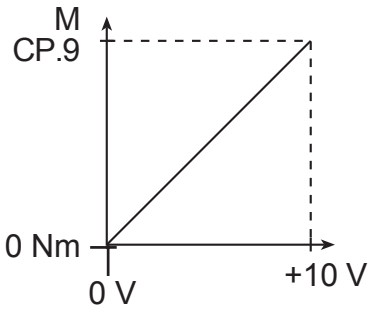

analoge Begrenzung:
Klemmen X2.16 / X2.17

Einstellbereich:	0…5 x M_N
Auflösung:	0,1 Nm
Werkseinstellung:	3 x M_N
Kundeneinstellung:	____ Nm

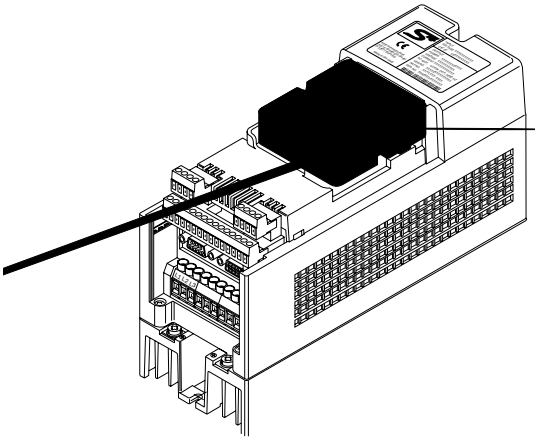

10.3 Funkentstörfilter

D

Der Servosteller KEB COMBIVERT S4 ist optionell mit integrierter Funkentstörung lieferbar. Für alle Gerätegrößen sind Unterbaufilter erhältlich. Die Abmessungen der Unterbaufilter befinden sich im Kapitel „5. Abmessungen".

10.3.1 Technische Daten

Servosteller	**Art.Nr.:** Filter-Bausatz	**[A]** Nennstrom	**[mA]** Ableitstrom	**[V]** Nennspannung
03 (D-Gehäuse)	09.E4.T60-0001	20	12	230
05 (D-Gehäuse)	09.E4.T60-0001	20	12	230
07 (D-Gehäuse)	10.E4.T60-1001	8	15	400
10 (D-Gehäuse)	10.E4.T60-1001	8	15	400
12 (E-Gehäuse)	14.E4.T60-1001	20	50	400
16 (G-Gehäuse)	16.E4.T60-1001	50	50	400
18 (H-Gehäuse)	18.E4.T60-1001	70	30	400

10.3.2 Anschluß

Anschluß 1-phasig

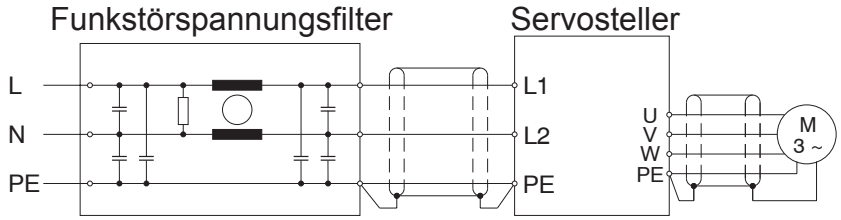

Anschluß 3-phasig

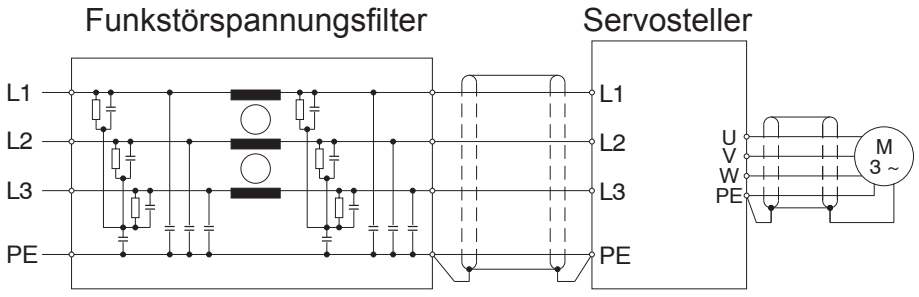



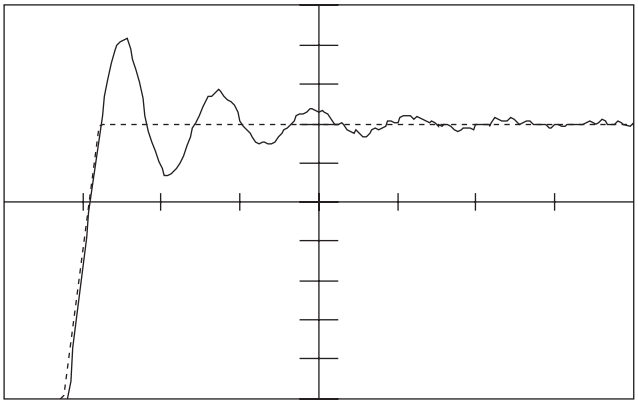

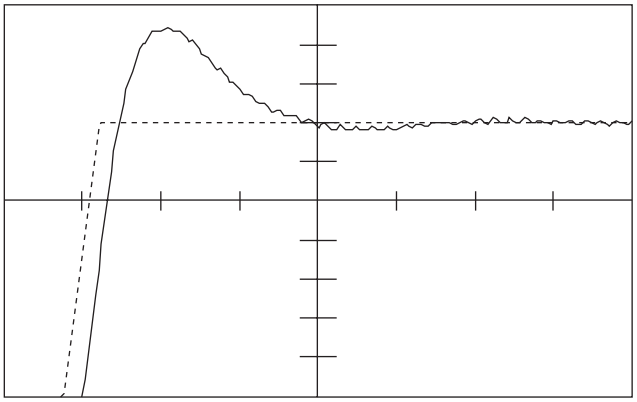

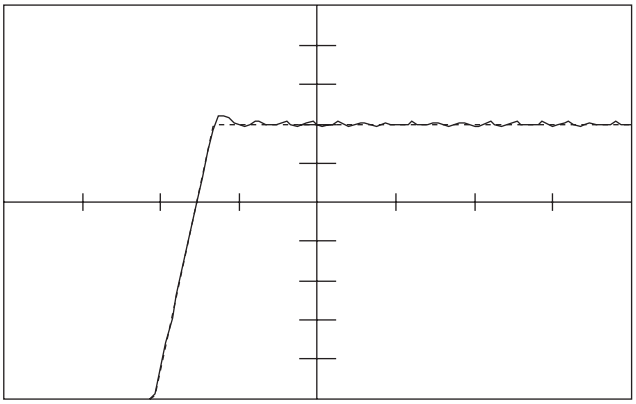

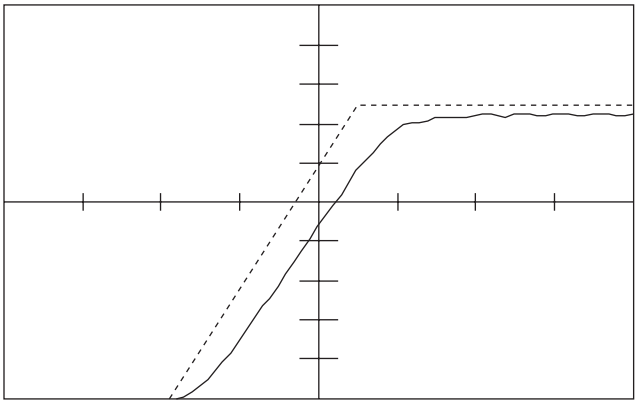


E. OP

D

ext. Übertemperatur

Tritt auf, wenn externe Temperaturüberwachung auslöst.
Ursachen:
- Widerstand an den Klemmen OH/OH >1650 Ohm
- Motor überlastet
- Leitungsbruch zum Temperaturfühler

Ladeshuntfehler

Ladeshunt nicht überbrückt, tritt kurzzeitig während der Einschaltphase auf, muß jedoch sofort selbständig zurückgesetzt werden. Bleibt die Fehlermeldung bestehen, können folgende Ursachen in Frage kommen:
- Ladeshunt defekt
- falsche oder zu geringe Eingangsspannung
- hohe Verluste in der Versorgungsleitung
- Bremswiderstand falsch angeschlossen
- Bremsmodul defekt

Satzanwahlfehler

Error **SEt** tritt auf, wenn versucht wird einen gesperrten Parametersatz anzuwählen

---

Busfehler

Error **buS**; bei Busbetrieb kann eine Überwachungszeit (Watchdog Zeit ud.8) eingestellt werden. Der Fehler wird ausgelöst, wenn innerhalb der eingestellten Zeit keine Telegramme eingehen.

Externer Fehler

Error **E**xternal **F**ault wird ausgelöst, wenn ein digitaler Eingang als externer Fehlereingang programmiert ist (di. 3...di.10 = 6) und auslöst.

Leistungsteilkennung

Error **P**ower **u**nit **C**ode invalid; während der Initalisierungsphase wurde das Leistungsteil nicht, oder als nicht zulässig, erkannt.

Endschalterfehler

Tritt auf, wenn bei Solldrehrichtung rechts oder links die Klemme F nicht aktiv war (Klemmenhandling siehe di- und Pn-Parameter).

Endschalterfehler

Tritt auf, wenn bei Solldrehrichtung rechts oder links die Klemme R nicht aktiv war (Klemmenhandling siehe di- und Pn-Parameter).

D

CPU-Fehler 	Hardwarefehler
Steuerkartendefekt 	Hardwarefehler
Software Endlage vorwärts 	Tritt auf, wenn bei der Positionierung eine Sollposition außerhalb des zugelassenen Bereiches ausgewählt wurde (siehe Pc-Parameter).
Software Endlage rückwärts 	Tritt auf, wenn bei der Positionierung eine Sollposition außerhalb des zugelassenen Bereiches ausgewählt wurde (siehe Pc-Parameter).
Fehler Inkrementalgeber 	Nicht oder falsch angeschlossener Geber
Übertemperatur 2 	Tritt auf wenn der Motor überlastet ist und wird durch die interne Motorstromüberwachung ausgelöst. Funktion eines elektrischen Motorschutzrelais. Behebung: – Motor entlasten – Drehmomentgrenze (Parameter CP.9) herabsetzen
Überdrehzahl 	**E**rror **O**ver **S**peed tritt auf, wenn die Istdrehzahl höher als die Maximaldrehzahl ist. Ursachen: – Resolver nicht angeschlossen – Drehzahlregler falsch eingestellt

13. Passwörter

Customer "read only" Passwort	**100**
Customer "on" Passwort	**200**
Drive Passwort	**500**

GB

1. Introduction 4
1.1 Application 4
1.2 Part Code 4

2. Operating Specifications 5
2.1 Moving or Rotating Parts 5
2.2 High Operating Temperatures 5
2.3 Connection Directions 5
2.4 Interference Protection of Servo Controller . 6
2.5 Interference Protection of Electric Plants . 7
2.6 Operating Directions 7

3. Control Cabinet Installation 8
3.1 **Ambient Conditions 8**
3.2 Installation Instructions 8
3.3 Calculations 9
3.4 Minimum distance 9

4. Technical Data 10
4.1 230V Class 10
4.2 400V Class 10
4.3 Overload charakteristic 12

5. Dimensions 13

6. Connection 14
6.1 Survey Housing sizes 14
6.2 Power Circuit Terminals 15
6.3 Connection 16
6.3.1 1-phase Connection 230V 16
6.3.2 3-phase Connection 400V 17
6.4 Incremental Encoder Simulation 18
6.5 Connection Resolver 18
6.6 Connection SIN/COS-Encoder Option ... 19
6.7 Cables 19
6.8 Control Terminal Strip X1 20
6.8.1 Digital Inputs / Outputs 21
6.8.2 Analog Inputs / Outputs 21
6.8.3 Output Relay 21

7. Operation 22
7.1 Parameter Structure 22
7.2 Parameter Survey 22
7.3 Selection and Changing of Parameters . 23
7.4 Storing Parameter Value 23
7.5 Error Message 23

8. Parameter Description 24

9. Drive Mode 35
9.1 Setting Possibilities 35
9.2 Condition 35
9.3 Display and Keyboard 35
9.4 Setpoint Display / Setpoint Presetting 35
9.5 Rotation Presetting 36
9.6 Start / Stop / RUN 36

10. Accessories 37
10.1 Braking Resistor 37
10.1.1 Part No. 37
10.1.2 Technical Data 37
10.1.3 Dimensions 38
10.1.4 Connection 38
10.2 Submounting braking resistor 39
10.2.1 Dimensions 39
10.3 Radio Interference Suppression Filter ... 40
10.3.1 Tecnical Data 40
10.3.2 Connection 40
10.4 Operator 41

11. Adjustment Assistance Speed Controller 42

12. Error Diagnosis 43

13. Passwords 45

1. Introduction

1.1 Application

GB

The digital servo controller KEB COMBIVERT S4 serves exclusively for the control and regulation of the servo motors KEB COMBIVERT SM.

On delivery the servo amplifiers are synchronized to the servo motors supplied by KEB. So you receive a highly dynamic drive which is connected and ready for operation within the shortest time for standard applications.

The operation of other motors requires an adaption of the amplifier and is to be recommended only with special knowledge of control technology.

1.2 Part Code Servo Controller

Size Type Design Sub-assembly

A B . S 4 . C D E - F G H I

AB Size / Dimension wide
see Part 3

C Housing design: D, E, G or H

D Supply voltage.
0 ... 200V class DC sub-assembly
1 ... 400V class DC sub-assembly
2 ... 200V class
3 ... 200V class with 3-phase Interference suppression
4 ... 400V class

E Mechanic construction of the motor.
Motor unit marking see part B

F Motor nominal speed.

1 ... 1500 UPM	3 ... 3000 UPM	5 ... ------- UPM
2 ... 2000 UPM	4 ... 4000 UPM	6 ... 6000 UPM

G 0 ... with self ventilated
1 ... with forced ventilated

HI

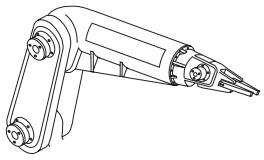

– Motor shaft
– Feed axis and parts connected to it



– Housing of servo motor
– Braking resistors

GB

– Use shielded motor cables. Connect shield to the Servo controller to PE and extensively connect to motor housing.
– Earth servo controller very well: star-shaped earthing, avoid earth loops, shortest connection to main earthing terminal.

The connections on the control terminal strip and the encoder inputs show a safe seperation in accordance with VDE 0100. The person who sets up the systems or machines must ensure that the existing or newly wired circuit meets the VDE requirements for safe seperation.

2.4 Interference Protection of Servo Controller

The control and power inputs of the servo controller are protected against interferences.
An increased operational reliability and additional protection against malfunctions is achieved through following measures:

– Use of mains filter when the mains voltage is affected by the connection of large consumers (reactive-power compensation equipment, HF-furnaces etc.)
– Protective wiring of inductive consumers (solenoid valves, relays, electromagnets) with RC elements or similar devices to absorb the energy released at switch-off.
– Separate laying of power lines as described in the connection directions to avoid inductive and capacitive coupling of interference pulses.
Paired-twisted cables protect against inductive parasitic voltages, shielding provides protection against capacitive parasitic voltages. Optimal protection is achieved with twisted and shielded cables when signal and power lines are layed separately.

GB

2.5 Interference Protection of Electric Plants

The servo controller KEB COMBIVERT S4 transmits waves of high frequency. Following measures can reduce the arising interference pulses that may effect electric plants in the vicinity of the servo controller:

- Installation of the servo controller in a metal housing.
- Shielded motor cables.
  The shield must be connected to PE of the servo controller and to the housing of the motor (connect extensive shield). The shielding shall not be used as protective earthing. Only an uninterrupted shield begining as close as possible at the servo controller or servo motor ensures a safe function of the shielding.
- Good earthing (metal-powder tape or 10 mm^2 earth lead)
- Use of radio interference suppression filters.

2.6 Operating Directions

To avoid premature ageing or destruction of the servo system KEB COMBIVERT S4 observe the following directions!

- Install a circuit interrupter between voltage supply and servo controller to permit the independent switch-off of KEB COMBIVERT S4.
- Frequent switching between mains and servo controller is not permitted!
- The switching between motor and servo controller during operation is prohibited!
- The servo system KEB COMBIVERT S4 is to be operated under suitable conditions (see Ambient Condition).

3. Control Cabinet Installation

***Altitude of site max. 2000 m* — A power reduction of 1 % per 100 m must be taken into account for site altitudes of 1000 m and more above sea level, i.e. 1500mNN = 95% $P_{Nominal}$**

GB

3.1 Ambient Conditions

Max. permissible limit values:	Servo controller KEB COMBIVERT S4
Coolant inlet temper.- / Ambient temperature during operation	-10 °C…+45 °C
Storage temperature	-25 °C…+70°C
Transport temperature	-25 °C…+70°C
Relative humidity max.	max. 95 %, no condensationg (identification "F" DIN 40040) Climatic category 3K3

3.2 Installation Instructions

– Stationary installation and earthing of the servo controller KEB COMBIVERT S4.
– At the installation of the servo controller observe minimum distance to adjacing elements (see Installation Instructions).
– No moisture or water shall penetrate into the servo controller.
– Avoid penetration of dust into the servo controller. For installation in a dust-proof housing sufficient heat dissipation must be provided.
– Do ***not*** operate the servo system KEB COMBIVERT S4 in explosion-protected rooms.
– Ensure sufficient heat emmission of the servo motor.
– Protect servo controller and servo motor against aggressive gases and liquids.
– Avoid any impacts or shocks on the servo motor.
– Use suitable devices for fitting or taking off drive elements on the motor shaft (toothed wheels, belt-pulleys, clutches etc.)

If other consumers which produce electric or magnetic fields or which effect the power supply are located in the vicinity of the servo controller, they must be positioned as far away as possible from the servo controller and steps must be taken to suppress interferences.

GB

3.3 Calculations

Calculation of control cabinet surface $A = \frac{P_V}{T \cdot K}$ [m^2]

Rate of air flow with fan cooling: $V = \frac{3{,}1 \cdot P_V}{T}$ [m^3/h]

A = Control cabinet surface [m^2]

T = Temperature difference [K] (Default value = 20 K)

K = Heat transfer coefficient $\left[\frac{W}{m^2 \cdot K}\right]$ (Default value = 5 $\frac{W}{m^2 \cdot K}$)

P_V = Heat dissipation [W]

V = Air flow rate of fan [m^3/h]

For detailed informaton please refer to the catalogs of the control cabinet manufacturers.

3.4 Installation Conditions

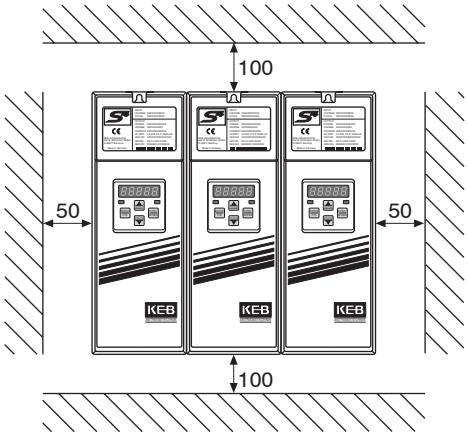

Minimum distance

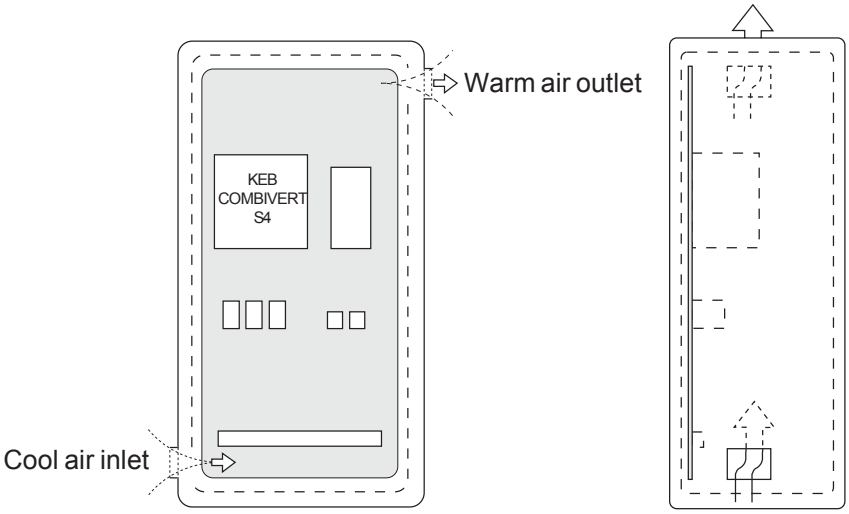

4. Technical Data

Operating temperature -10°	... +45°C; Storage: -25° ... +70°C
Type of Protection	IP20

GB

The Type of protection is warranted only with correct installation and connection of the components.

4.1 230V Class

Size		03		05		14
Housing		D		D		G
Mains voltage[1]	[V]	180 . . . 260 ± 0%				
Line frequency	[Hz]	50 / 60 Hz ± 2 Hz				
Line phases		1	3	1	3	3
Input current	[A]	4,8	2,6	12,8	7	36
max. perm. Mains fuse [3]	[A]	16	10	16	10	50
Rated output current	[A]	2,4		6,4		33
Stillstandsdauerstrom I_{do}	[A]	6,4		6,4		33
Stall current I_{max} [4]	[A]	8,5 for 1200 ms		14,8 for 600 ms		49,5 for 1000 ms
Line cross section [2]	[mm²]	1,5		1,5		280
Heat dissipation P_V [5]	[W]	65		75		100

[1] In relation to 230V nominal input voltage

4.2 400V Class

Size		07	10
Housing		D	D
Mains voltage [1]	[V]	305 . . . 500 ± 0%	
Line frequency	[Hz]	50 / 60 Hz ± 2 Hz	
Line phases		3	3
Input current	[A]	3	7
max. perm. Mains fuse [3]	[A]	10	10
Rated output current	[A]	2,7	6,4
Stall current I_{do}	[A]	2,7	6,4
Peak current I_{max} [4]	[A]	8,5 for 200 ms	22 for 200 ms
Line cross section [2]	[mm²]	1,5	1,5
Heat dissipation [5]	[W]	50	110

[1] In relation to 400 V nominal input voltage

[2] Recommended min. cross section of mains supply at rated power and cable length up to 30 m.

[3] Mains fuse and line cross section can also be dimensioned on the basis of the rated current of the servo motor.

[4] The peak current I_{max} is a theoretical value, that leads to the operation of the current limiting. The maximum torque llimit should be adjusted 10...15% below I_{max}.

[5] Heat dissipation related to the static continuous current (heat dissipation control circuit ca. 20 W).

GB

Size		12	16
Housing		E	G
Mains voltage [1]	[V]	305 . . . 500 ± 0%	
Line frequency	[Hz]	50 / 60 Hz ± 2 Hz	
Line phases		3	3
Input current	[A]	18,2	36
max. perm. Mains fuse [3]	[A]	20	50
Rated output current	[A]	16,5	33
Stall current I_{do}	[A]	16,5	21,5
Peak current I_{max} [4]	[A]	38 for 600 ms	49,5 for 600 ms
Line cross section [2] [3]	[mm²]	2,5	10
Heat dissipation [5]	[W]	240	310

Size		18	22	24
Housing		H	R	U
Mains voltage [1]	[V]	305 . . . 500 ± 0%		
Line frequency	[Hz]	50 / 60 Hz ± 2 Hz		
Line phases		3		
Input current	[A]	55	127	198
max. perm. Mains fuse [3]	[A]	80	160	315
Rated output current	[A]	50	115	180
Stall current I_{do}	[A]	45	115	180
Peak current I_{max} [4]	[A]	75 for 800 ms	172,5 for 1000 ms	270 for 1000 ms
Line cross section [2] [3]	[mm²]	25	50	95
Heat dissipation P_V [5]	[W]	610	1500	2400

[1] In relation to 400 V nominal input voltage

[2] Recommended min. cross section of mains supply at rated power and cable length up to 30 m.

[3] Mains fuse and line cross section can also be dimensioned on the basis of the rated current of the servo motor.

[4] The peak current I_{max} is a theoretical value, that leads to the operation of the current limiting. The maximum torque llimit should be adjusted 10...15% below I_{max}.

[5] Heat dissipation related to the static continuous current (heat dissipation control circuit ca. 20 W).

GB

4.3 Overload characteristics

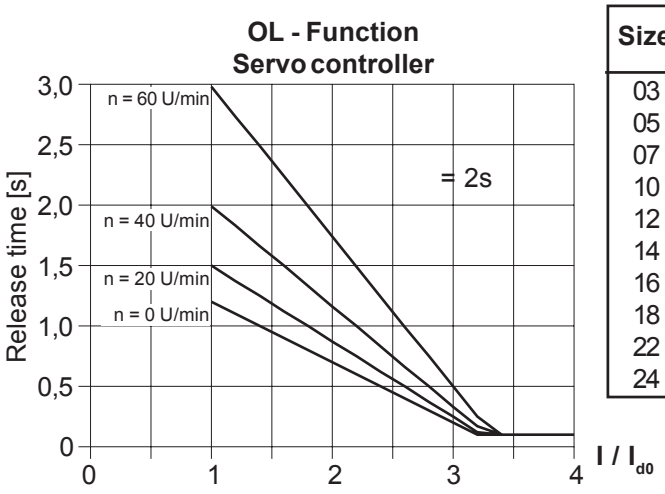

Size	I_{d0}	$\frac{I}{I_{d0}}$ max.
03	2,4	1,3
05	6,4	2,3
07	2,7	3,1
10	6,4	3,4
12	16,5	3,0
14	33,0	1,5
16	21,5	2,3
18	45	1,7
22	115	1,5
24	180	1,5

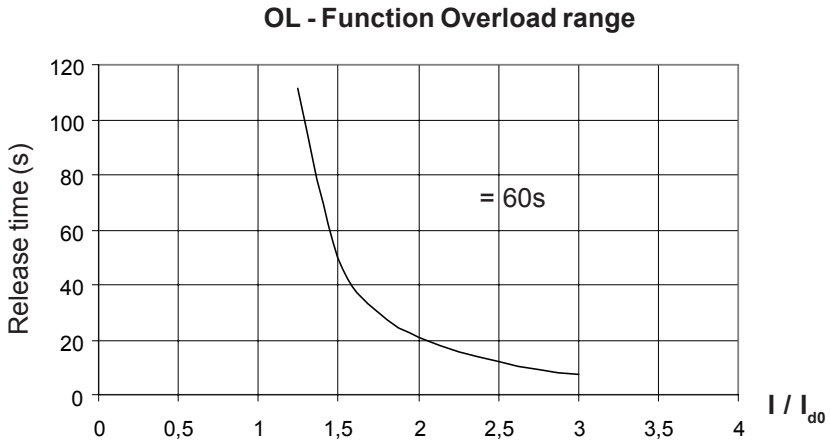

GB

5. Dimensions

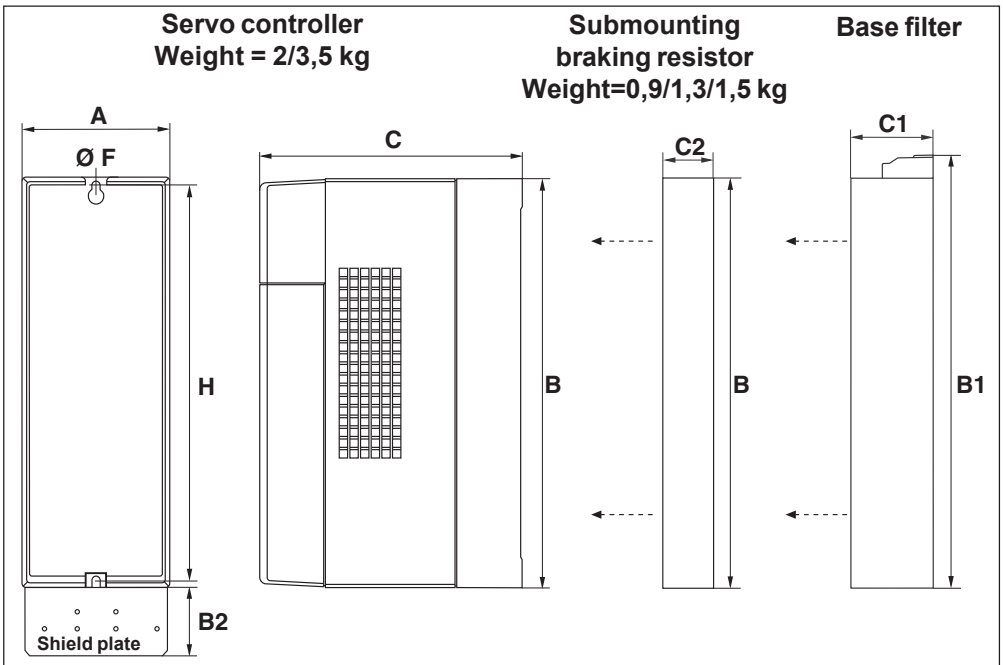

Size	A	B	B1	B2	C	C1	C2	F	H
D	90	250	264	37,5	160	50	30	5	240
E	130	290	352	37,5	200	50	30	7	275

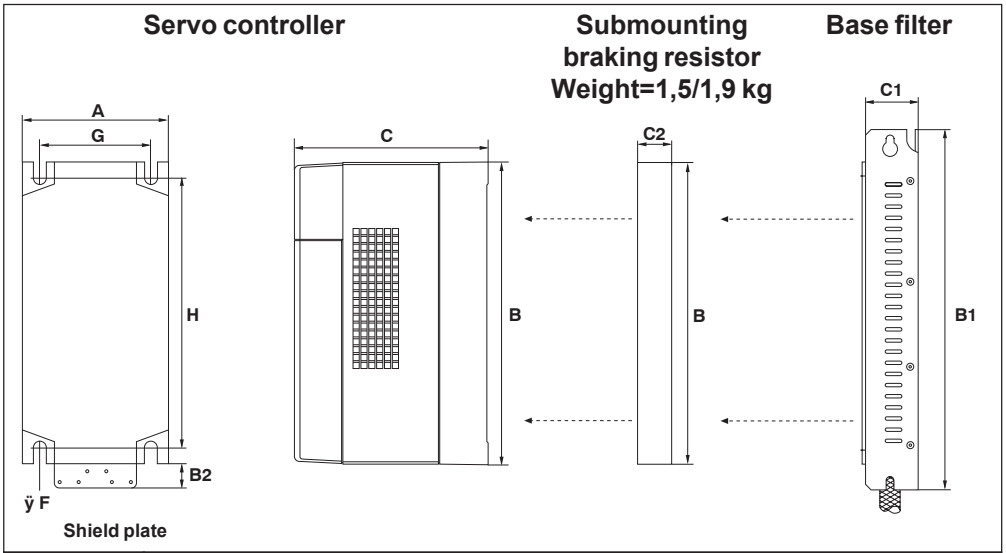

Size	A	B	B1	B2	C	C1	C2	F	G	H	Wight
G	170	340	415	32	255	56	30	7	150	330	10
H	297	340	445	51	255	66	-	7	250	330	14
R*	340	520	-	68	355	-	-	10	300	495	25-29
U	340	800	-	-	355	-	-	11	300	775	75

Dimensions and wights of the HF-filter: see Instruction Manual 00.F4.00B-K000 (KEB-COMBIVERT F4).

*) The R-Housing installation filter have no influence to the dimensions of the housing. (Weight = 7 kg)

6. Connection

6.1 Survey Housing sizes

GB

Size D - E

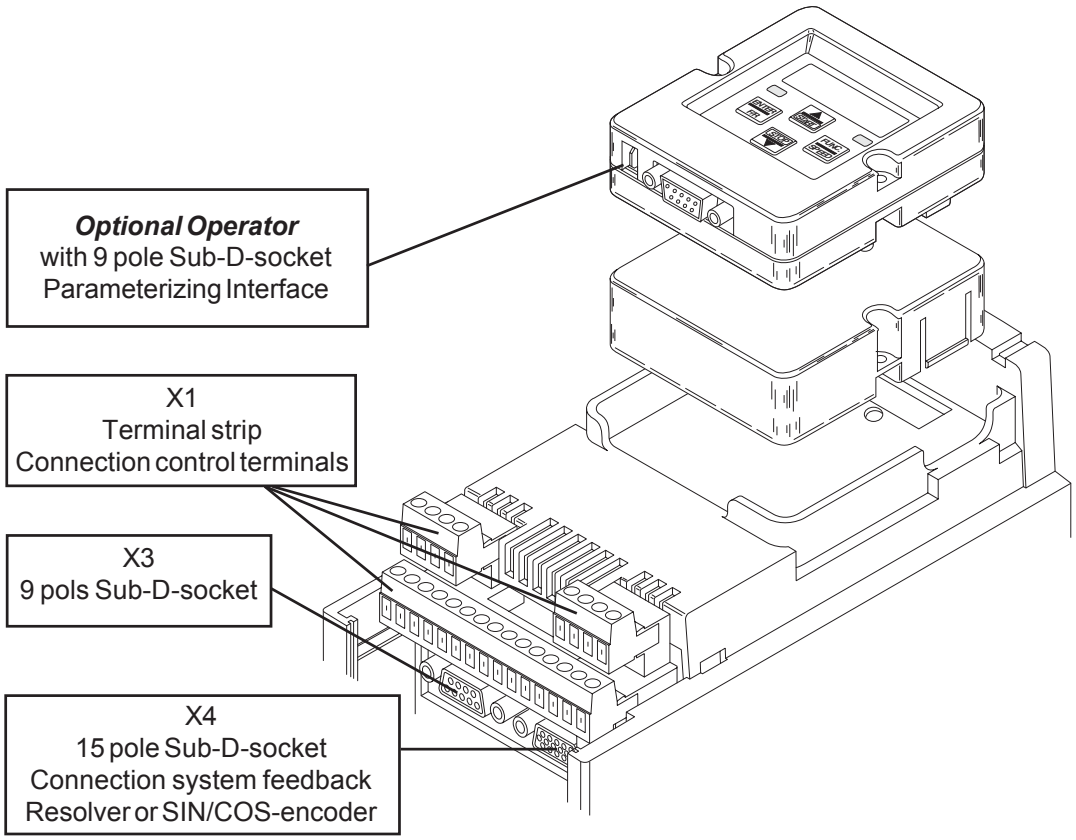

Size G / H / R / U

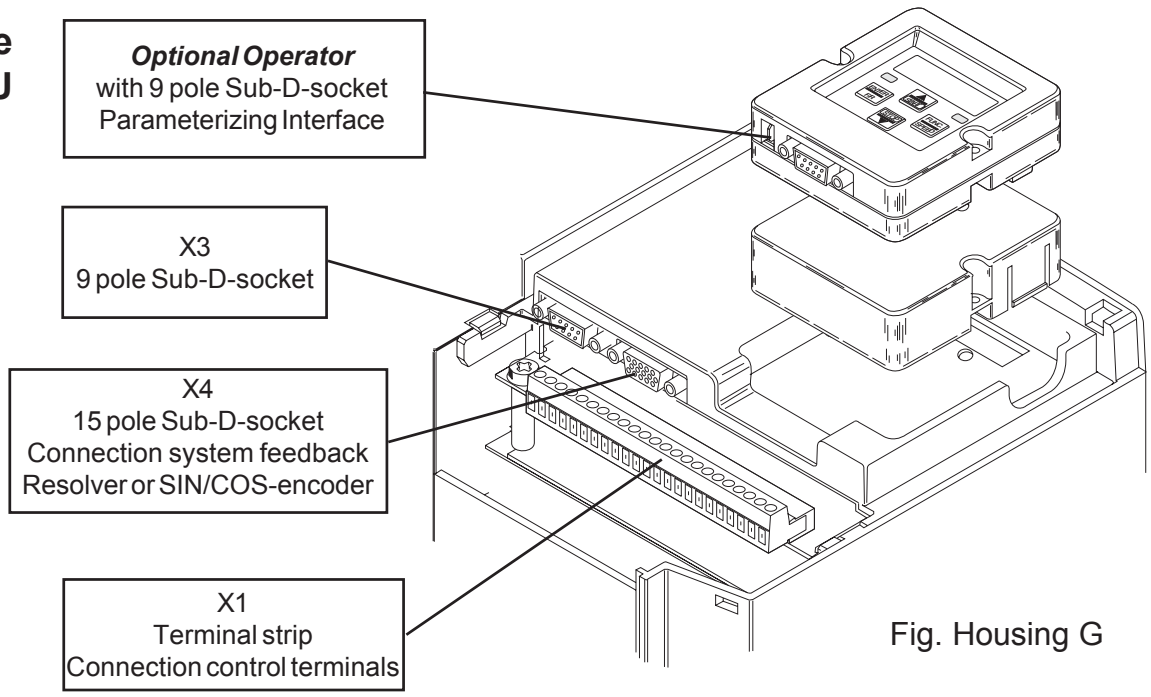

Fig. Housing G

GB

6.2 Power Circuit Terminals

Size D

⚠ **Note input voltage, since 230V and 400V class (3 phase) is possible.**

1-phase

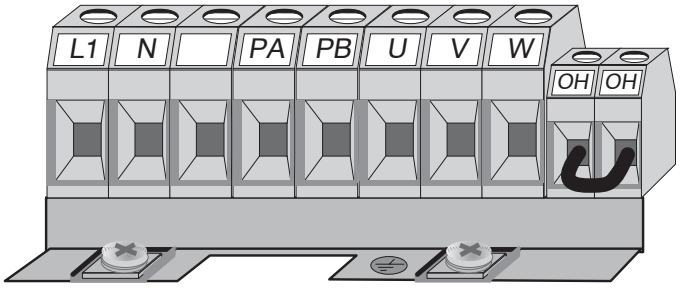

L1, N	1 phase mains connection
L1, L2, L3	3 phase mains connection
PA, PB	Connection braking resistor

3-phase

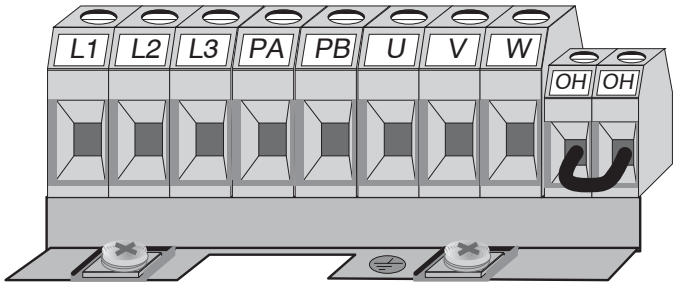

U, V, W	Motor connection
OH, OH	Connection for temperature sensor
⏚	Connection for screening/earthing

Size E

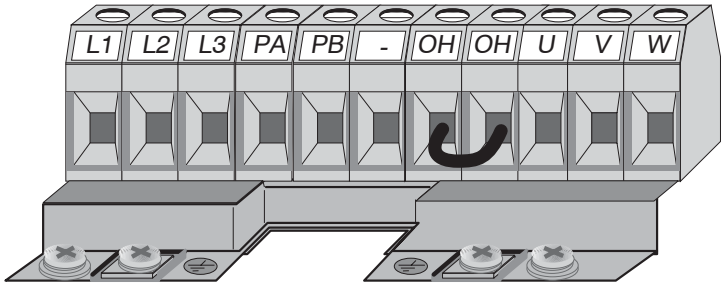

L1, L2, L3	3 phase mains connection
PA, PB	Connection braking resistor
PA, -	Connection for braking module and feedback unit
OH, OH	Connection for temperature sensor
U, V, W	Motor connection
⏚	Connection for screening/earthing

Size G

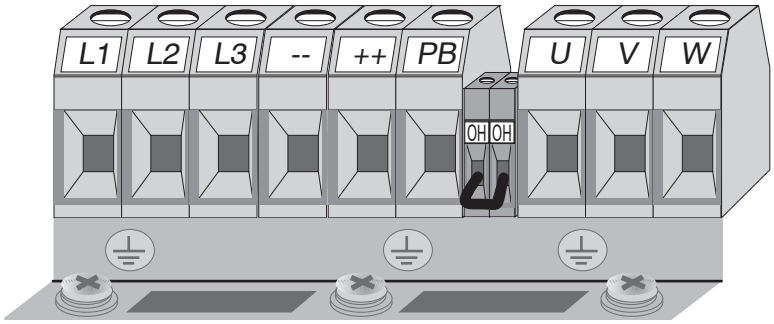

L1, L2, L3	3 phase mains connection
++, PB	Connection braking resistor
++, --	Connection for braking module, feedback and supply unit DC input 420...720VDC
OH, OH	Connection for temperature sensor
U, V, W	Motor connection
⏚	Connection for screening/earthing

Unit without DC input

+PA, PB	Connection braking resistor
+PA, -	Connection for braking module and feedback unit

Size H

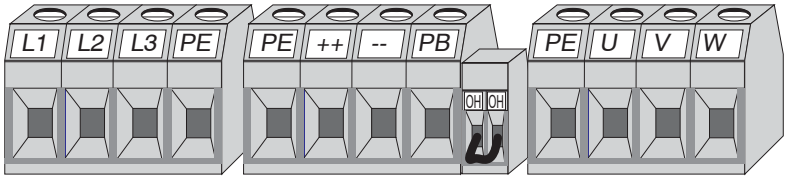

L1, L2, L3	3 phase mains connection
++, PB	Connection braking resistor
++, --	Connection for braking module, feedback and supply unit DC input 420...720VDC
OH, OH	Connection for temperature sensor
U, V, W	Motor connection
PE	Connection for screening/earthing

GB

Size R and U

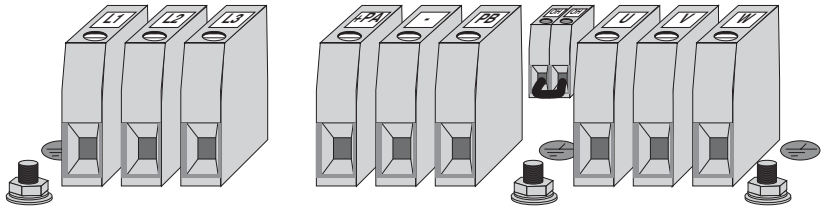

L1, L2, L3	3 phase mains connection
+PA, PB	Connection for braking resistor
+PA, -	Connection for braking module and feedback unit
OH, OH	Connection for temperature sensor
U, V, W	Motor connection
⏚	Connection for screening/earthing

Remove or plug in the power connector only at switched off unit and disconnected power supply!
Observe the correct phase sequence for the connection of the servo motor!

6.3 1-phase Connection 230 V Class

PE	Protective earth conductor
U, V, W	Motor
L1, L2	Mains connection 1-phase
PA, PB	Connection braking resistor

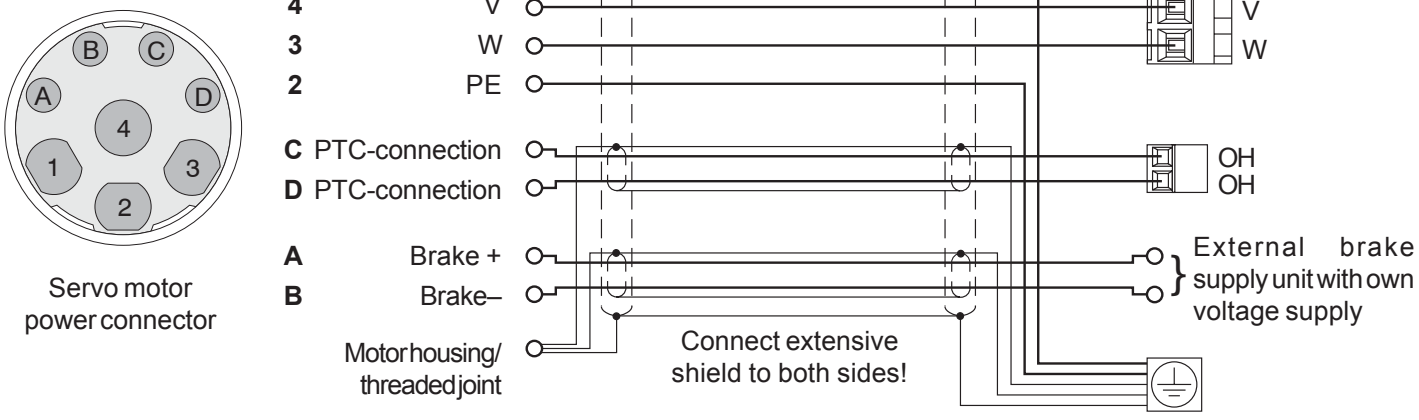

Servo motor power connector

Connector Contact No.	Designation	Cable Core No.
1	U	1
4	V	2
3	W	3
2	PE	Green-Yellow
A	Brake +	5
B	Brake –	6
C	PTC-Contact	7
D	PTC-Contact	8

GB

6.4 3-phase Connection 230 V/400 V Class

Absolutely ensure the observance of the supply voltage of the servo controller (3 x 230 V / 3 x 400 V!

Remove or plug in the power connector only at switched off unit and disconnected power supply !

Observe the correct phase sequence for the connection of the servo motor !

PE	Protective earth conductor
U, V, W	Motor
L1, L2, L3	Mains connection 3-phase
PA, PB	Connection braking resistor

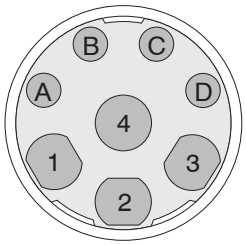

Servo motor power connector

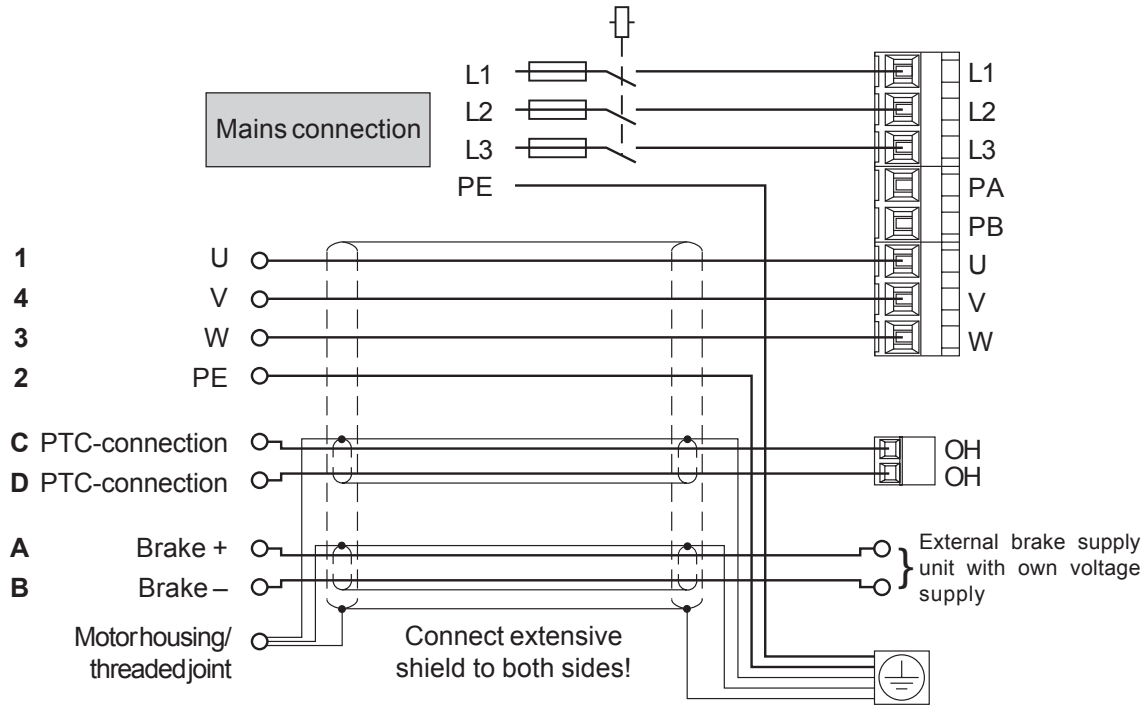

Connector Contact No.	Designation	Cable Core No.
1	U	1
4	V	2
3	W	3
2	PE	Green-Yellow
A	Brake +	5
B	Brake –	6
C	PTC-Contact	7
D	PTC-Contact	8

GB

6.5 Connection Incremental-EncodeR Simulation

The encoder interface X3 is reversible from an incremental encoder emulation to an incremental encoder input. The increments of the emulation are fixed to 1024 for units with resolver interface. For units with SIN/COS interface, the increments of the SIN/COS - encoder are used.

Max. input frequency: < 300 kHz
Signals: RS 422 / 2 trace signals and zero signal
Max. transmission link: 50 m
Released encoder types: Kübler 5800 / 5820
Heidenhain RON 425 / ROD 426
or compatible

Servo controller
Sub-D-connector X3

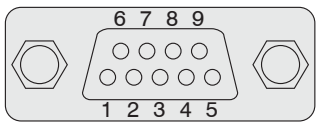

PIN No.	Signal	Meaning
1	U_{a1}	Signal channel A
2	U_{a2}	Signal channel B
3	U_{a0}	Signal Zero
4	+5V	max. 150 mA (1)
5	+18V	max. 100 mA (1)
6	$\overline{U}_{a1}$	Signal channel A inverted
7	$\overline{U}_{a2}$	Signal channel B inverted
8	$\overline{U}_{a0}$	Signal zero inverted
9	GND	

(1) Voltage supply at X3 and X4 can be loaded at the +18V with max. 100mA. Alternatively the +5V can be loaded with 300mA.

Remove or plug in the power connector when the unit is switched off and the power supply is disconnected!

6.6 Connection Resolver

Servo motor
resolver connector

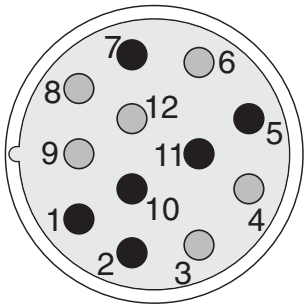

Servo controller
Sub-D connector X4

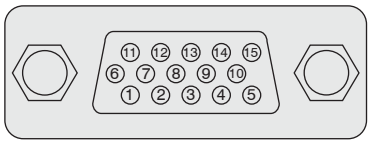

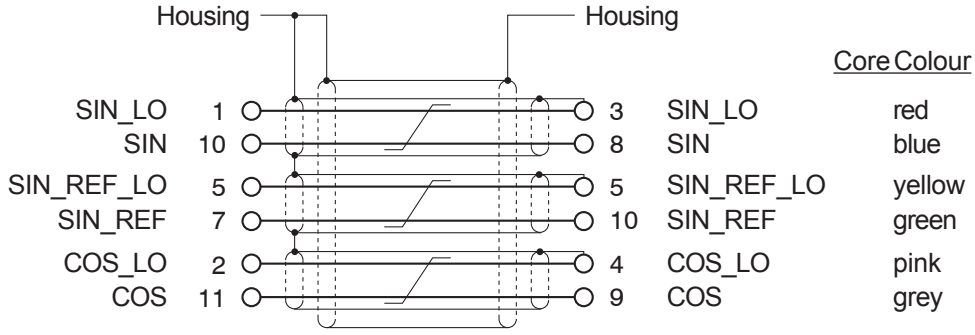

GB

6.7 Connection SIN/COS-Encoder*Option*

Remove or plug in the connector only at switched off unit and disconnected power supply !

Servo Controller
Sub-D socket X4

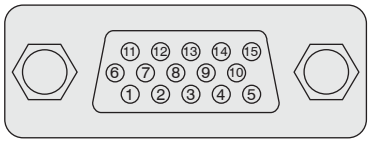

Servo Motor

Servo motor
Encoder connector

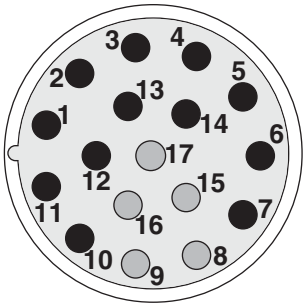

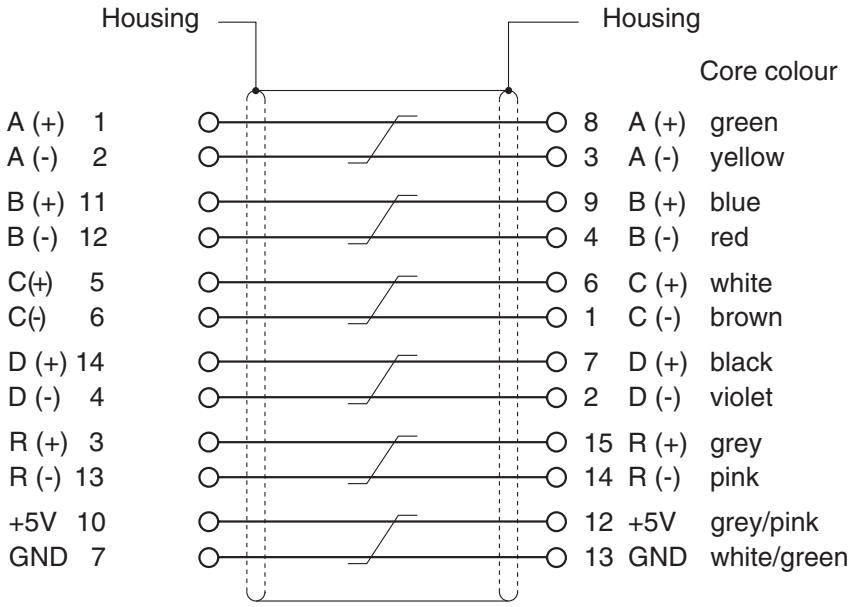

6.8 Cables

For the servo system KEB COMBIVERT S4 factory-assembled motor, resolver and encoder cables are available in the lengths 5m, 10m, 15m und 20m.

00.S4.109–0005

Cable length
- 05 = 5 m
- 10 = 10 m
- 15 = 15 m
- 20 = 20 m

Part
- 109 = Resolver cable
- 019 = Motor cable 1,5 mm²
- 119 = Motor cable 2,5 mm²
- 209 = Encoder cable ERN1387

Type designation 00.S4

Other cable lengths on request.

6.9 Control Terminal Strip X1

Rotation release (terminal X2.3 / X2.4) and analog torque limitation (terminal X2.16 / X2.17) have no function in the Drive Mode. See page GB 35 "Drive Mode".

GB

Terminal	Designation	Function	
1	ST	Control release (output off circuit, if opened, no torque)	digital inputs: +12…33 V / Ri = 2,7 k PNP potential separated * When the unit is defective there is no guarantee that the software protective function will start.
2	RST	Reset	
3	F	Release of rotation direction (limit switch*) forward	
4	R	Release of rotation direction (limit switch*) reverse	
5	I1	Input for jogging speed forward	
6	I2	Input for jogging speed reverse	
7	I3	Input for external error setting	
8	D1	Digital output signal 1	programmable PNP - transistor outputs 16V - 30V / max. 20 mA
9	D2	Digital output signal 2	
10	Uout	+ 24 V voltage input	16V - 30V / max. 60 mA at ext. supply of the control approx $U_{ext.}$
11	0 V	Ground reference for +24 V and digital in/outputs	
12	CRF	+10 V reference voltage	+10V (+/- 3%) ; max. 4 mA
13	COM	Ground for analog inputs/outputs	
14	REF 1 +	Analog setpoint value setting	Voltage difference input - 10V… + 10V / Resolution: 12 Bit Ri = 40 k
15	REF 1 –		
16	REF 2 +	Analog torque limitation ***refer to Parameter CP.9***	Voltage difference input 0…+10V Resolution: 12 Bit; -10V…0V ≙ 0 Nm/ +10V ≙ $M_{max.}$ / Ri = 40 k
17	REF 2 –		
18	A1	Programmable analog output 1	-10V…+10V / Resolution: 10 Bit Ri=100
19	A2	Programmable analog output 2	
20	RLA	Output relay:	30 V DC/1 A
21	RLB	RLA / RLC: normal operating condition	
22	RLC	RLB / RLC: POWER OFF / malfunction	
23	Ex. Voltage	external supply of the control	+ 24 V external voltage input

GB

6.9.1 Digital Inputs / Outputs

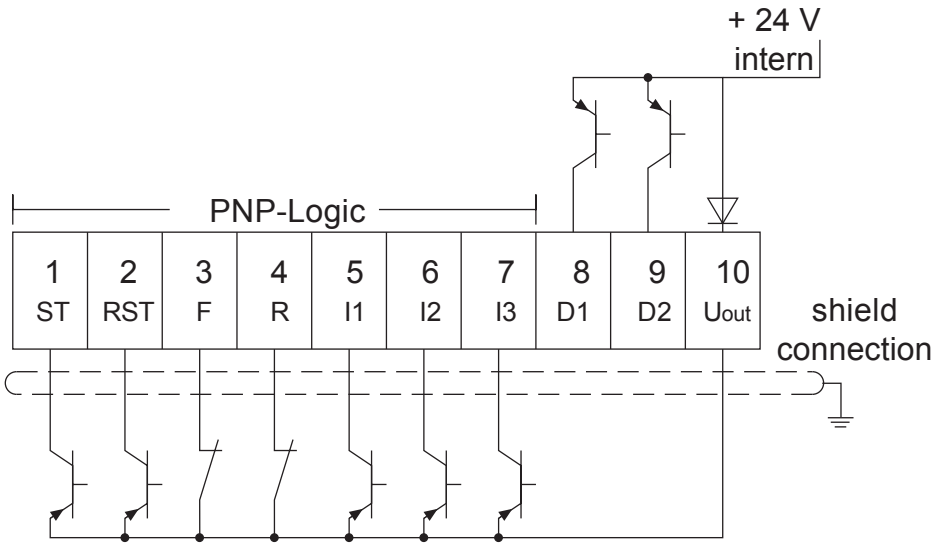

6.9.2 Analog Inputs / Outputs

without analog torque limitation

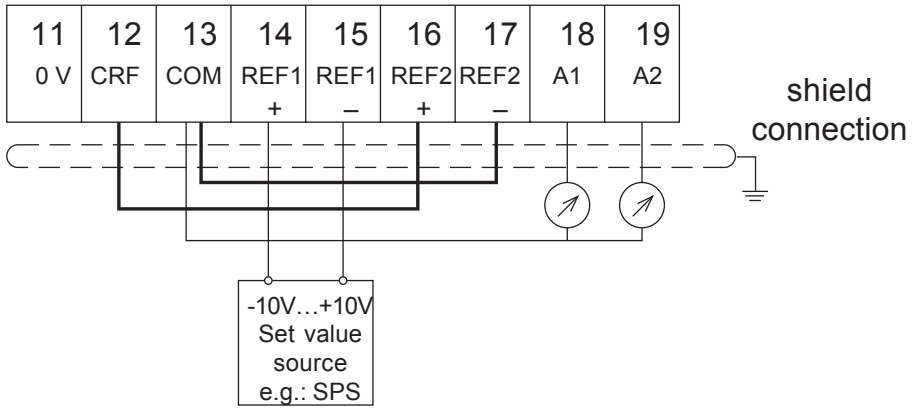

with analog torque limitation

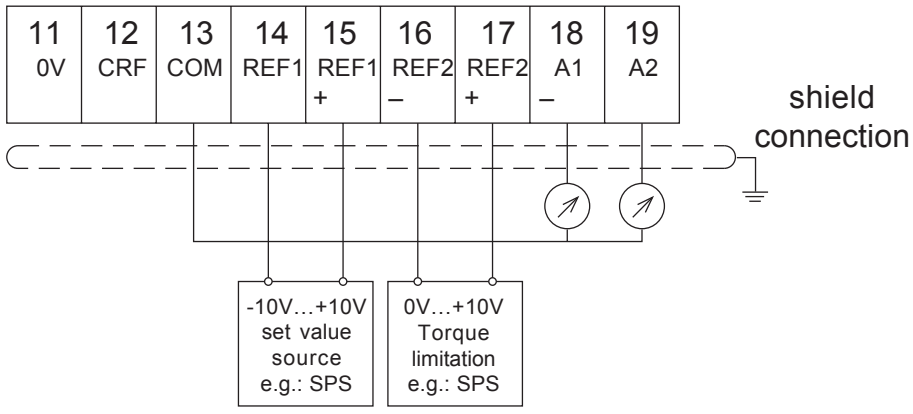

6.9.3 Output Relay

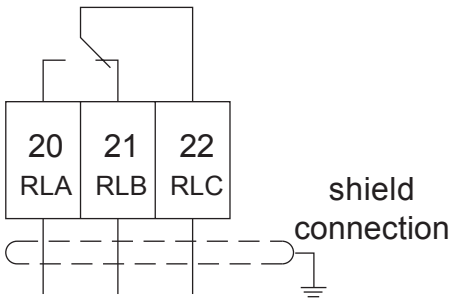

6.8.4 External voltage supply of the control

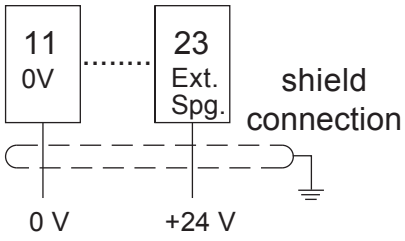

7. Operation

7.1 Parameter Structure

GB

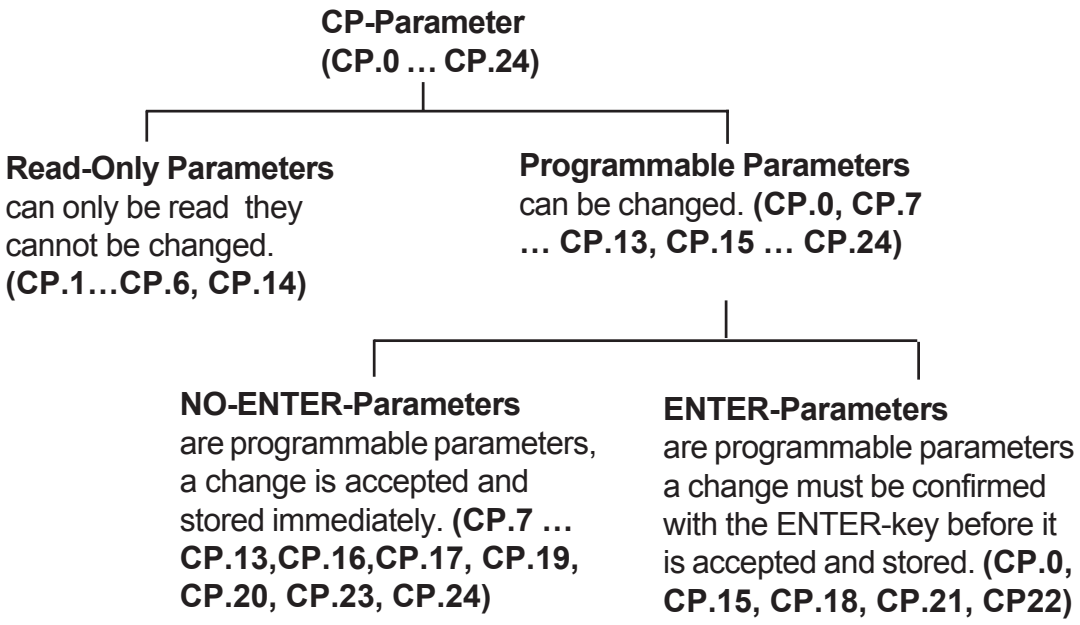

7.2 Parameter Survey

Par.-No.	Parameter name	Setting range	Resolution	Factory setting
CP.0	Password input	0…9999	1	–
CP.1	Actual speed display	–	0,5 rpm	–
CP.2	Status display	–	–	–
* CP.3	Apparent motor current	–	0,1 A	–
* CP.4	Max. apparent motor current	–	0,1 A	–
* CP.5	Current Torque	–	0,1 Nm	–
CP.6	Setpoint speed display	–	0,5 rpm	–
CP.7	Acceleration time	0…320 s	0,01 s	0,05 s
CP.8	Deceleration time	0…320 s	0,01 s	0,05 s
CP.9	Torque limit	0…5 x M_N	0,1 Nm	3 x M_N
CP.10	Max. setpoint speed	0…9999	0,5 rpm	Rated speed
CP.11	Jogging speed	0…9999	0,5 rpm	100 rpm
CP.12	P-factor speed controller	0…65535	1	Motor-type dependent
CP.13	I-factor speed controller	0…65535	1	Motor-type dependent
CP.14	Line number incremental encoder simulation	–	–	1024/2048 (for sin/cos)
CP.15	Behaviour at external fault	0…6	1	0
CP.16	Offset REF 1	-100%…+100%	0,1 %	0 %
CP.17	Zero point hysteresis REF 1	0…10 %	0,1 %	0 %
CP.18	Function output A1	0…6	1	2
CP.19	Amplification output A1	-20…+20	0,01	3 x M_{Nenn} ^ +10V
CP.20	Amplification output A2	-20…+20	0,01	+/–n_{Nenn} ^ +/–10V
CP.21	Switching condition output D1	0…20	1	20
CP.22	Switching condition output D2	0…20	1	18
CP.23	Torque level output D1	0…50 Nm	0,1 Nm	0,5 x M_{Nenn}
CP.24	Speed level output D2	0…16000 rpm	0,5 rpm	0,5 x n_{Nenn}

*With the actual values displayed, from the normal machine dispersion and temperature drifts, tolerances must be taken into account. (about ± 10% in relation to the nominal value)

GB

7.3 Selection and Changing of Parameters

When switching on the servo controller the display always shows the value of parameter CP.1 (Status Display).

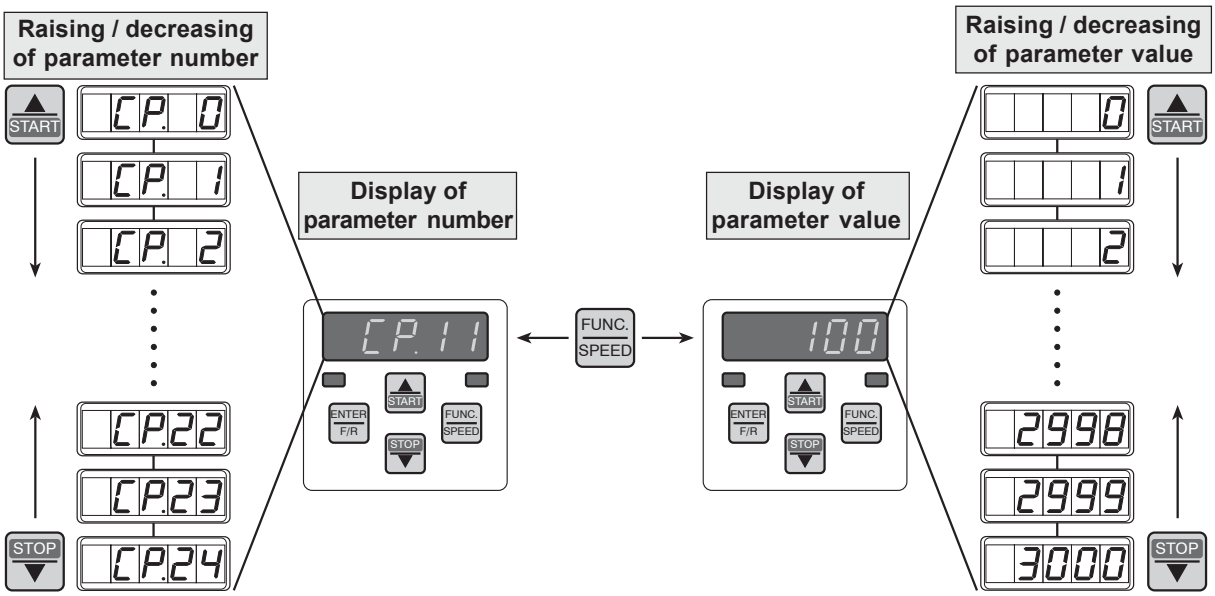

7.4 Storing Parameter Value

When changing the value of an **ENTER-Parameter** a point appears behind the last digit in the display. By pressing the ENTERkey the adjusted value is accepted and stored (point disappears).

Example:

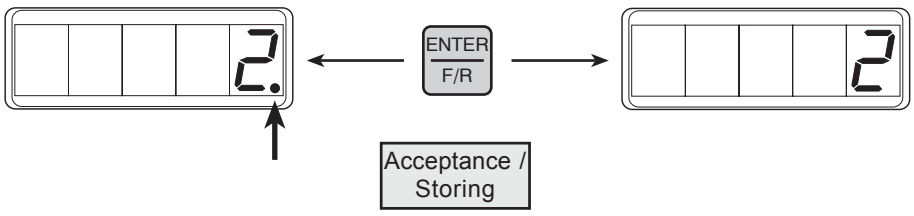

7.5 Error Message

If an error occurs during operation the current display is overwritten by the error message. To reset the error message press the key "ENTER".

Example:



The key ENTER only reset the error message. To reset the error itself the error cause must be eliminated first and a reset at terminal X2.2 or a cold start must be carried out.

! Error Massages / Error Diagnosis see page GB 43!

8. Parameter Description

GB

The servo controller is supplied ex factory without password protection, i.e. all programmable parameters can be changed. After the parameterizing the unit can be locked against unauthorized access. The adjusted mode is stored.

The passwords are listed in page GB 45!

Passwort input

Locking of CP-Parameters:

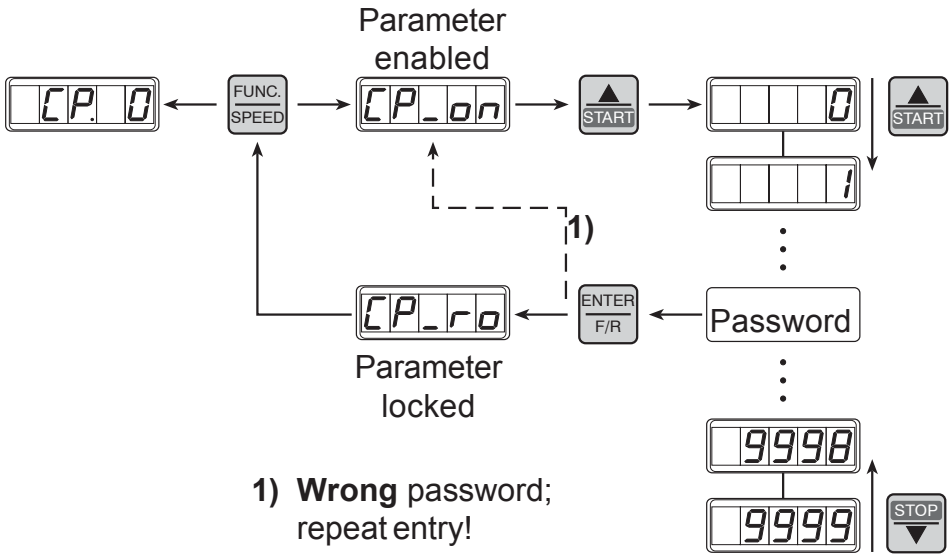

Enabling of CP-Parameters:

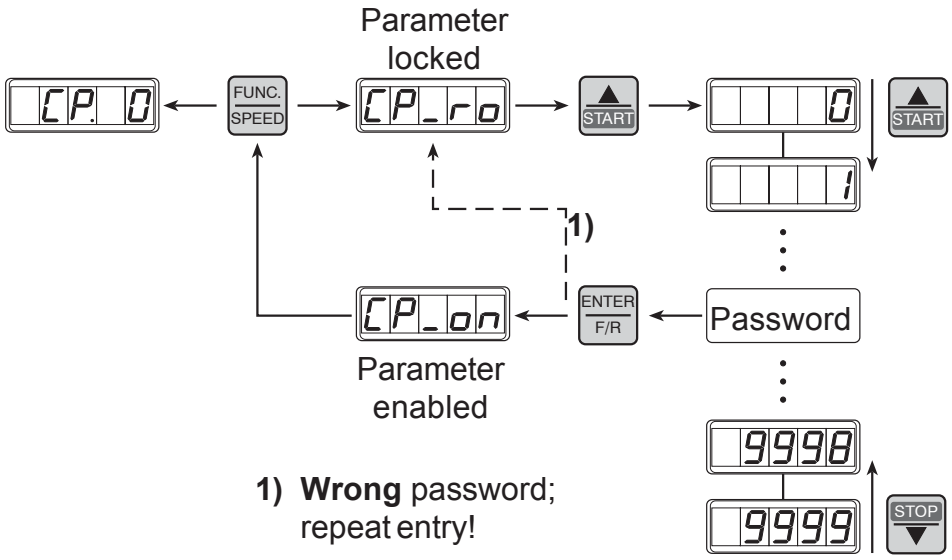

Actual Speed Display

Display of current motor speed.
Rotation "forward": Resolution 0,5 rpm.
Rotation "reverse": Represented by negative speed with a resolution of 1 rpm.

Example:

Rotation "forward"

Rotation "reverse"
Speed1837 rpm or 1837,5 rpm



Status Display

The status display indicates the current operating condition of the servo controller. Possible indications and their meaning are listed in the following:

Operating State ready:

noP	0	No Operation	Control release not briged, modulation switched off, output voltage = 0, drive uncontrolled
LS	70	Low Speed	Control release briged, no rotational direction command, modulation switched off, output voltage = 0 drive uncontrolled

Operating State run :

Facc	64	Forward Acceleration	Drive accelerates forward
Fcon	66	Forward Constant	Drive runs with constant speed forward
FdEc	65	Forward Deceleration	Drive decelerates forward
rAcc	67	Reverse Acceleration	Drive accelerates in reverse
rCon	69	Reverse Constant	Drive runs with constant speed in reverse
rdEc	68	Reverse Deceleration	Drive decelerates in reverse
rFP	79	ready for positioning	Drive waits for the positioning to start
P A	80	positioning active	Drive executes a positioning command
SrA	82	search for reference active	Drive in reference point search

Operating State Abnormal Condition:

A.OH2	97	abnormal stopping OH	Quick stop after OH-prewarning
A.dOH	96	abnormal stopping drive OH	Quick stop after motor overheating
A.EF	90	abnormal stopping EF	Quick stop after external error
A.PrF/	94	abnormal stopping prohibited	Quick stop caused by one of the
A.Prr	95	rotation forward / reverse	software limit switches
A.bus	93	abnormal stopping bus	Quick stop after the time monitoring starts for serial communication (Watchdog)

Operating State Fatal Error:

E.OC	4	error overcurrent	Overcurrent
E.OP	1	error overpotential	Overvoltage
E.UP	2	error underpotential	Undervoltage
E.OH	8	error overheat	Overheat in the inverter
E.dOH	9	error drive overheat	Motor overheated
E.OH2	30	error motor protection	Motor overloaded
E.OL	16	error overload inverter	Overload KEB COMBIVERT S4
E.EF	31	error extern fault	External Fault
E.PrF/	46	error prohibited rotation	Quick stop caused by one of the
E.Prr	47	forward/reverse	software limit switches
E.OS	105	error overspeed	Error overspeed
E.LSF	15	current limit resistor error	Loading shunt error
E.SEt	39	error at set selection	Set selection error set x
E.bus	18	error bus	Time monitoring for serial communication
E.EnC	32	error encoder	Error in the resolver interfacing
E.PuC	49	error power unit	Error in the power part detection
E.dSP	51	error DSP	Internal processor error
E.hyb	52	error hybrid	Internal hardware error in the hybrid detection
E.SLF	110	error software limit forward	Software limit switch F
E.SLr	111	error software limit reverse	Software limit switch R

A detailed error description is shown at page GB 43.

Apparent Motor Current

Indication of the current apparent motor current in ampere.

Resolution: 0,1 A

Apparent Motor Current Peak Value

Indication of the maximum apparent motor current measured during operation, in ampere.

Resolution: 0,1 A

Current Torque

Indication of the current torque in newtonmeter.

Resolution: 0,1 Nm

Setpoint Speed Display

Indication of preset setpoint speed in rpm.

Resolution: 0,5 rpm

Positive speed: Rotation "forward" **or** no sense of rotation

Negative Speed: Rotation "reverse"



Acceleration Time

The parameter defines the time required to accelerate form 0 rpm to rated speed of the servo system (3000/4000/6000 rpm). The behaviour of the actual acceleration time is proportional to the speed change (delta n).

GB

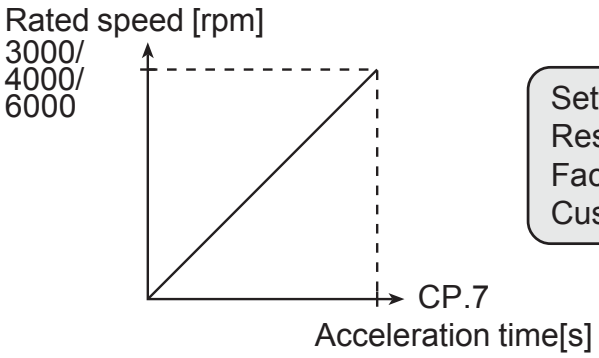

Setting range:	0…320 s
Resolution:	0,01 s
Factory setting:	0,05
Customer setting:	____ s

$$\frac{\textbf{CP.7}}{\textbf{Rated speed}} = \frac{\textbf{actual acceleration time}}{\textbf{delta n}}$$

Calculation Example:

Calculation of acceleration time to be adjusted:

The drive shall accelerate from 100 rpm to 2500 rpm in **0,2 s** !
Rated speed of the drive: 3000 rpm

delta n = 2500 rpm – 100 rpm = 2400 rpm

$$CP.7 = \frac{\text{actual acceleration time}}{\text{delta n}} \cdot \text{Rated speed}$$

$$CP.7 = \frac{0{,}2\text{s}}{2400\text{ rpm}} \cdot 3000\text{ rpm} = \mathbf{0{,}25\text{ s}}$$

In this example the parameter CP.7 must be adjusted to 0,25 s !

If CP.7 and CP.8 = 0.00 s
then CP.16 and CP.17 without function

Deceleration Time

GB

The parameter defines the time required to decelerate from rated speed of the servo system (3000/4000/6000 rpm) to 0 rpm. The behaviour of the actual deceleration time is proportional to the speed change.

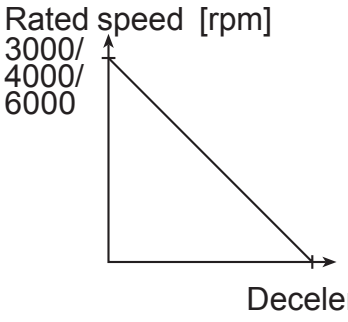

Setting range:	0…320 s
Resolution:	0,01 s
Factory setting:	0,05 s
Customer setting:	_____ s

$$\frac{\text{CP.8}}{\text{Rated speed}} = \frac{\text{actual deceleration time}}{\text{delta n}}$$

Calculation of deceleration time to be adjusted:

The drive shall decelerate from 3000 rpm to 1000 rpm in **0,05 s**!
Rated speed of the drive: 4000 rpm

delta n = 3000 rpm – 1000 rpm = 2000 rpm

$$\text{CP.8} = \frac{\text{actual deceleration time}}{\text{delta n}} \bullet \text{Rated speed}$$

$$\text{CP.8} = \frac{0{,}05\text{s}}{2000\ \text{rpm}} \bullet 4000\ \text{rpm} = \mathbf{0{,}1\ s}$$

In this example parameter CP.8 must be adjusted to 0,1 s !

When CP.7 and CP.8 = 0.00 s
then CP.16 and CP.17 without function



Torque Limit

The maximum permissible torque of the drive is defined with parameter CP.9.

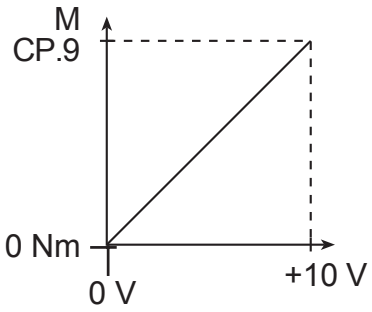

Analog limitation:
Terminals X2.16 / X2.17

Setting range:	0…5 x M_N
Resolution:	0,1 Nm
Factory setting:	3 x M_N
Customer setting:	____ Nm

GB

Maximum Setpoint Speed

Defines the maximum output speed of the servo controller.

Setting range:	0…9999 rpm
Resolution:	0,5 rpm
Factory setting:	Rated speed
Customer setting:	____ rpm

In case the preset speed is too high the value is limited internally to the maximum permissible value!

Jog-Drehzahl
Jogging Speed

Presetting of speed that can be activated via digital inputs I1 or I2.
Depending on the assignment of the inputs the jogging speed can be activated by direction of rotation "forward" or alternatively direction of rotation "reverse" . If both directions of roation are preset at the same time then rotation "forward" has priority.

Setting range:	0…9999 rpm
Resolution:	0,5 rpm
Factory setting:	100 rpm
Customer setting:	_____rpm

Condition:
The control terminals X2.1(ST), X2.3 (F) or X2.4 (R) must be connected with terminal X2.10 (+16V) .

Function:
- I1 or I2 active ⇨ Drive runs with adjusted jogging speed.
- I1 and I2 not active ⇨ Drive runs with original speed.

- In jogging operation the drive accelerates and decelerates at the torque limt.
- Original direction of rotation, speed, acceleration time and deceleration time are without function.
- In case the preset speed is too high the value is limited internally to the maximum permissible motor speed!

GB

P-Factor Speed Controller

Proportional factor of speed_controller.

see page 42 adjustment assistance speed controller

Setting range: 0...65535
Resolution: 1
Factory setting: motor-type depend
Customer setting: _____

I-Factor Speed Controller

Integral factor of speed controller.

see page 42 adjustment assistance speed controller

Setting range: 0...65535
Resolution: 1
Factory setting: motor-type depend
Customer setting: _____

Line Number Incremental Encoder Simulation

This Parameter shows the adjusted encoder (inc/r) of the incremental encoder simulation. It is dependent on the system sub-assembly.

Increments of servo system with
- Resolver (sub-assembly 009 - 012): 1024 Increments
- ERN 1387 (sub-assembly 012 - 014): 2048 Increments
- ERN 1188 (sub-assembly 015, 016): 512 Increments



Behaviour at External Fault

This parameter determines the response of the drive to an external fault.

Setting range: 0…6
Resolution: 1
Factory setting: 0
Remarks: ENTER-Parameter
Customer setting: _____

Value	Response of Drive
0	Error message: **E.EF** Immediate disconnection of inverter! ***!*** To restart eliminate the fault and make a ***Reset !***
1	Status message: **A.EF** Fast stop Disconnection of inverter after attaining speed 0. ***!*** To restart eliminate the fault and make a ***Reset !***
2	Status message: **A.EF** Fast stop Holding torque at speed 0. ***!*** To restart eliminate the fault and make a ***Reset !***
3	Status message: **A.EF** Immediate disconnection of inverter. ***!*** **Automatic** restart when fault condition no longer exists***!***
4	Status message: **A.EF** Fast stop Disconnection of inverter after attaining speed 0. ***!*** **Automatic** restart when fault condition no longer exists***!***
5	Status message: **A.EF** Fast stop Holding torque at speed 0. ***!*** **Automatic** restart when fault condition no longer exists ***!***
6	Status message: **none** No effect on the drive. ***!*** Fault is ignored***!***

GB

CP.16

Offset REF 1

Permits the shifting of the setpoint-speed characteristic.
! Only at CP.7 > 0,00 s!

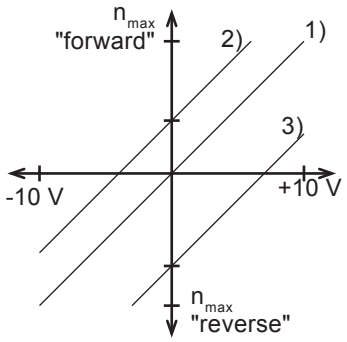

Adjustment of parameter CP.7 and CP.8 must be observed!

Setting range:	-100…+100 %
Resolution:	0,1 %
Factory setting:	0 %
Customer setting:	____ %

Examples:

Characteristic 1: CP.16 = **0%** (standard setting)
0V = 0 rpm
Rotation "forward": n_{max} is attained at +10V
Rotation "reverse": n_{max} is attained at -10 V

Characteristic 2: CP.16 = **+40%**
0V = 40 % of n_{max} "forward"
Rotation "forward": n_{max} is attained at 60% of +10V
Rotation "reverse": maximal 60% of n_{max} possible

Characteristic 3: CP.16 = **–70%**
0V = 70 % of n_{max} "reverse"
Rotation "forward": maximal 30% of n_{max} possible
Rotation "reverse": n_{max} is attained at 30% of -10V

CP.17

Zero Point Hysteresis REF 1

A zero point hysteresis of the analog reference input REF1 is adjusted with this parameter. Voltage fluctuations and ripple voltages around the zero point of the setpoint value do not cause any drifting of the motor.
! Only when CP.7 or CP.8 > 0,00 s !

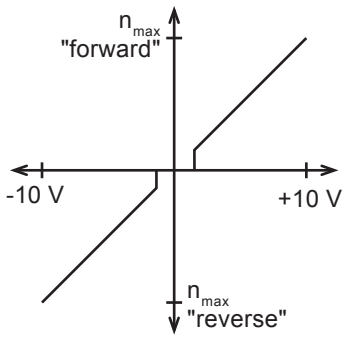

Adjustment of parameter CP.7 and CP.8 must be observed!

Setting range:	0…10 %
Resolution:	0,1 %
Factory setting:	0 %
Customer setting:	____ %

0…10 % = 0…+/- 1 V

Example: If CP.17 is adjusted to 5 % then the drive starts only at a setpoint value of +/- 0,5 V.

Function Output A1

GB

This parameter defines which variable is given out at analog output 1 (terminal X2.18).

Setting range:	0…6
Resolution:	1
Factory setting:	2
Remarks:	ENTER-Parameter
Customer setting:	_____

Value	Output variable	Value range at CP.19=1
0	actual speed	-6000…+6000 rpm ^= -10V…+10V
1	apparent motor speed	0…25 A ^= 0…+10V
2	actual torque	0…25 Nm ^= 0…+10V
3	intermediate circuit voltage	0…1000 V ^= 0…+10V
4	speed reference variable	-6000…+6000 rpm ^= -10V…+10V
5	system deviation (speed control)	-6000…+6000 rpm ^= -10V…+10V
6	setpoint torque	0…25 Nm ^= 0…+10V

Amplification Output A1

Parameter CP.19 defines the amplifcation of the analog output signal at output A1 (terminal X2.18).

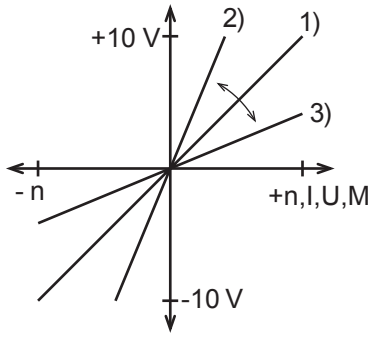

Setting range:	-20…+20
Resolution:	0,01
Factory setting:	3 x M_{Rated} ^= +10 V
Customer setting:	_____

Characteristic 1: Amplification factor 1
Characteristic 2: Amplification factor 2
Characteristic 3: Amplification factor 0,5

Calculation Example:

At 2000 rpm a measurement shall be taken at analog output A1 +10 V.

$$\textbf{CP.19} = \frac{\textbf{value at amplification 1 (s. CP.18)}}{\textbf{desired value at + 10 V}} = \frac{\textbf{6000 rpm}}{\textbf{2000 rpm}} = \textbf{3}$$

GB

Amplification Output A2

The analog output A2 (terminal X2.19) outputs the current speed of the servo systems.
Parameter CP.20 defines the amplification of the analog output signal.

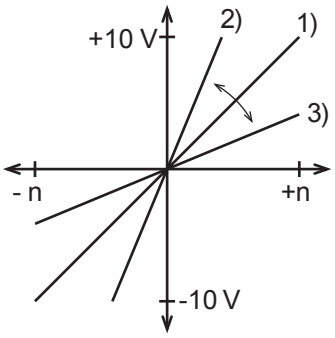

Setting range:	-20…+20
Resolution:	0,01
Factory setting:	+/– n_{Rated} ^ +/–10 V
Customer setting:	_____

Characteristic 1: Amplification factor 1
Characteristic 2: Amplification factor 2
Characteristic 3: Amplification factor 0,5

Standardization at amplification 1 (CP.20=1):
0…+/– 10 V ^ -6000…+6000 rpm

Calculation Example:

Rated speed of the servo system: 3000 rpm
At 1000 rpm a measurement shall be taken at analog output A2 +10 V.

$$CP.20 = \frac{\text{value at amplification 1}}{\text{desired value at +10V}}$$

$$CP.20 = \frac{6000\ \text{rpm}}{1000\ \text{rpm}}$$

$$CP.20 = 6$$

Switching Condition Output D1

Defines the switching condition of digital output D1.

Setting range:	0…20
Resolution:	1
Factory setting:	20
Remarks:	ENTER–Parameter
Customer setting:	_____

! Refer to table Switching Conditions page GB 34 !

Switching Condition Output D2

GB

Defines the switching condition of digital output D2.

! Refer to table below !

Setting range:	0…34
Resolution:	1
Factory setting:	18
Remarks:	ENTER–Parameter
Customer setting:	_____

Switching Conditions

Digital output D1 and D2

Value	Switching condition
0	always active
1	always active
2	system switched on; no abnormal operating condition
3	ready for operation and modulation enabled
4	abnormal operating condition / Fault (CP.2 = A.xxx or E.xxx)
5	inverter blocking after fault (E.xxx)
6	prewarning level electr. protective motor relay (OH.2) exceeded
7	after triggering of motor PTC-contact
8	prewarning level OH.2 or dOH exceeded
9	current controller in limitation
10	speed controller in limitation
11	any controller in limitation
12	drive in acceleration phase
13	drive in deceleration phase
14	drive runs with constant speed
15	drive runs with constant speed except speed 0
16	clockwise rotation – not at noP, LS, abnormal stopping or fault
17	anti-clockwise rotation-not at noP,LS,abnormal stopping or fault

only Digital output D1

18	actual speed > 0,1 x rated speed
19	apparent current > rated current
20	torque > torque level CP.23

only Digital output D2

18	actual speed > speed level CP.24
19	apparent current > rated current
20	torque > rated torque
21	Angle deviation > angle level
22	Reference mode completed
23	Target position reached only available in the posi mode
24	actual position > position level
25	Break control

Torque Level Output D1

Defines the torque level of digital output D1.

Setting range:	0…50 Nm
Resolution:	0,1 Nm
Factory setting:	0,5 x M_{Rated}
Customer setting:	_____ Nm

Speed Level Output D2

Defines the speed level of digital output D2.

Setting range:	0…16000 rpm
Resolution:	0,5 rpm
Factory setting:	0,5 x n_{Rated}
Customer setting:	_____ rpm

9. Drive-Mode

The Drive Mode is a special operating mode of the KEB COMBIVERT. It allows an easy manual startup. To activate the Drive Mode enter the corresponding password in **CP.0**.
The passwords are listed on page GB 45!

9.1 Setting Possibilities

– Stop / Start / Run
– Setpoint value
– Direction of rotation

9.2 Condition

The control release must be activated (terminal stip X2).

> ⚠ Control release (terminal X2.3 / X2.4) and analog torque limitation (terminal X2.16 / X2.17) are without function in the Drive Mode.

9.3 Display and Keyboard

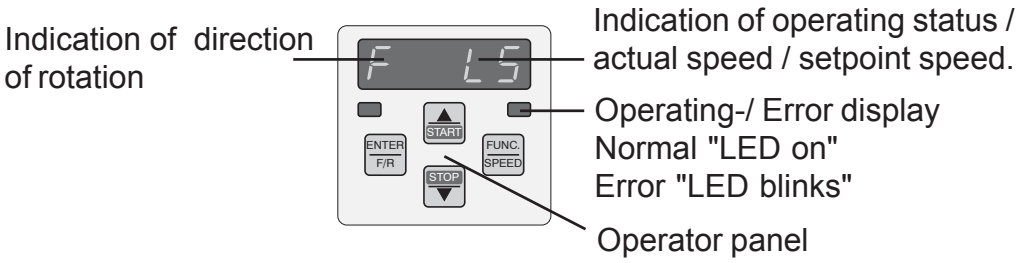

9.4 Setpoint Display / Setpoint Presetting

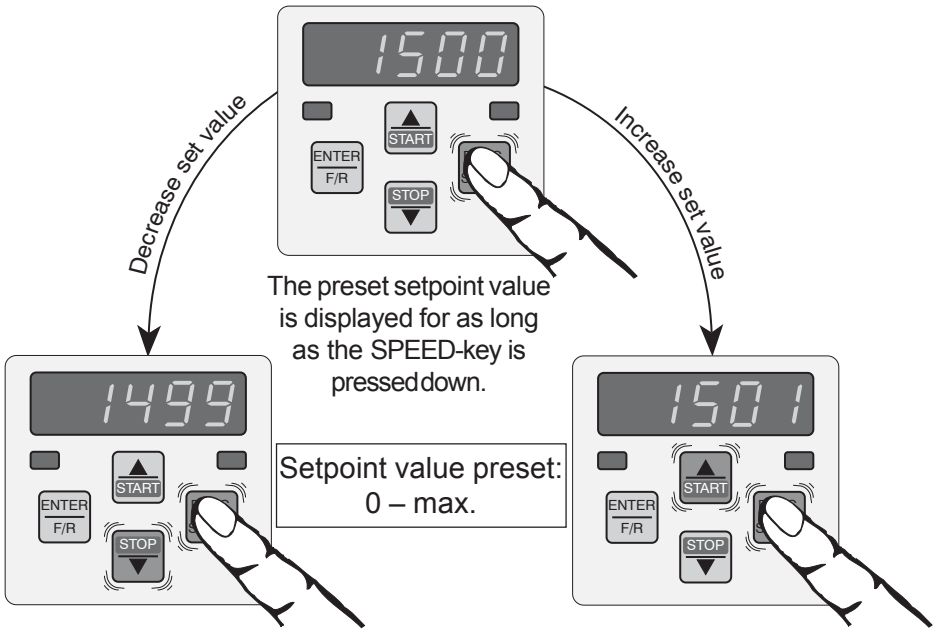

Hold the SPEED-key pressed down and decrease the indicated value with the STOP-key.

Hold the SPEED-key pressed down and increase the indicated value with the START-key.

GB

9.5 Rotation Presetting

Presetting Possibilities: **F** = forward (clockwise rotation)
r = reverse (anti-clockwise rotation)

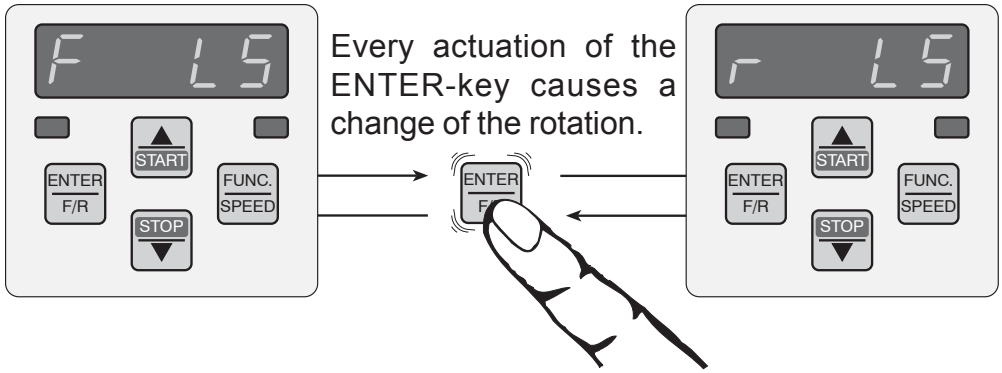

9.6 Start / Stop / RUN

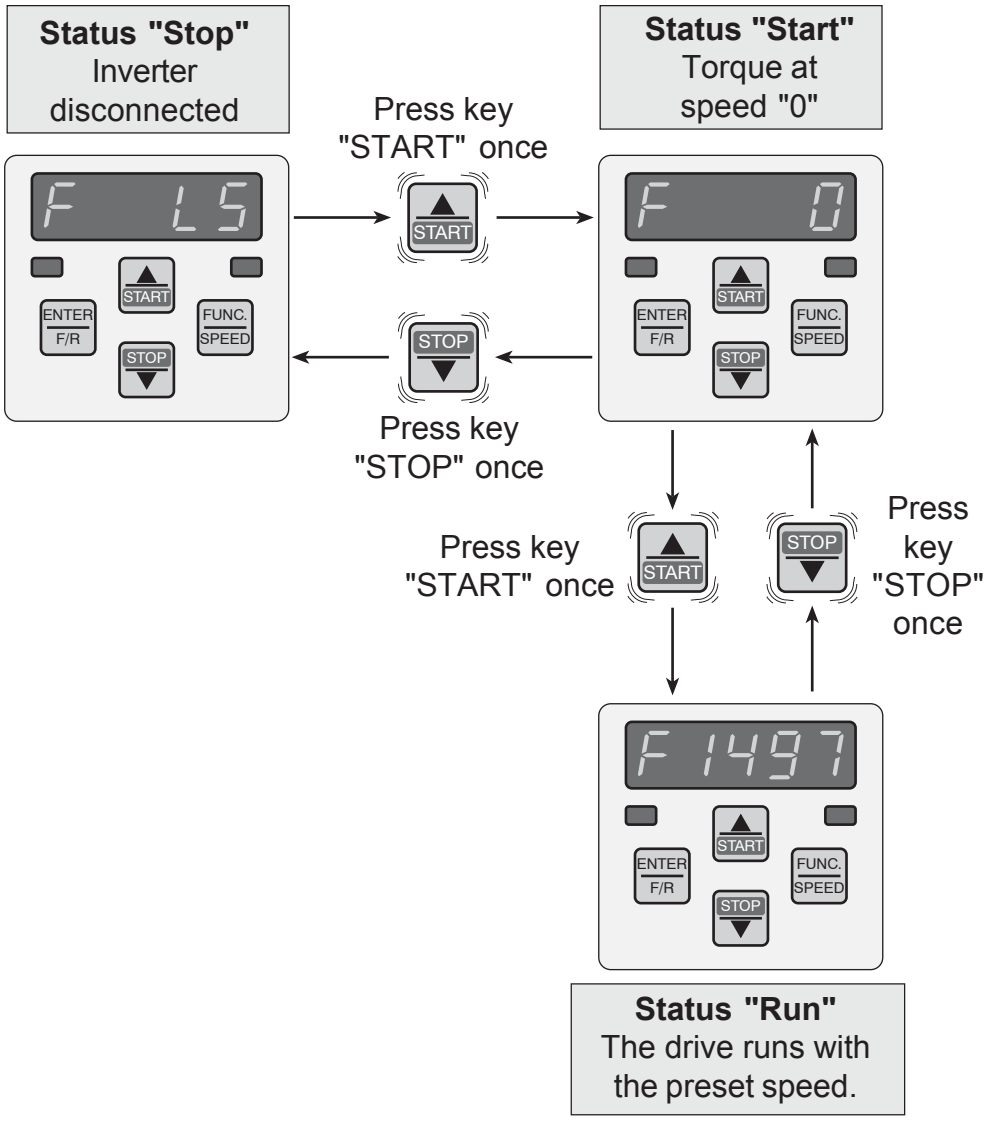

To change from Drive Mode to CP Mode press the keys "FUNC" and "ENTER" simultaneously and hold them for min. 3 s!
! Only possible in the status "Stop" !

10. Accessories

10.1 External Braking Resistor

The braking resistor heats up during the braking operation. If the braking resistor is installed in the control cabinet sufficient cooling of the cabinet interior must be provided and a sufficient distance to the KEB COMBIVERT S4 must be kept.

Do not mount the external braking resistor below the servo controller !

GB

10.1.1 Part No.

x x . 5 6 . 0 8 0 - x x x 8

- 00 = 6 % ED 01 = 25 % ED 02 = 40 % ED — Voltage class
- 2 = 230 V 4 = 400V — Braking resistor
- Size

10.1.2 Technical Data

Size	Part number	P_R [2] [kW]	R_B [Ohm]	P_N Nominal power [1] [W] 6 %	25 %	40 %
03, 05, 07, 10	14.56.080-4008	7,0	82	800	2700	3700
	14.56.080-4018					
	14.56.080-4028					
12	15.56.080-4008	10,3	56	1200	3700	5500
	15.56.080-4018					
	15.56.080-4028					
16	16.56.080-4008	14,8/14,4	39	1700	5000	7500
	16.56.080-4018		39			
	16.56.080-4028		40			
18	18.56.080-4008	26,3	22	4000	9000	13500
	18.56.080-4018					
	18.56.080-4028					

[1] The resistor nominal power to be selected P_N dependent on the peak power and the cycle duration factor c.d.f [%].

[2] Peak power recorded for a short period P_R Dimensioning inverter: Motor = 1 : 1

10.1.3 Dimensions

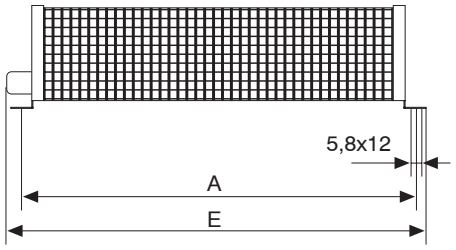

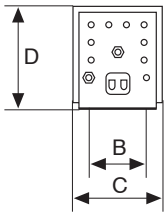

GB

Part number	R_B [Ohm]	P_N [W]	A	B	C	D	E
14.56.080-4008	82	800	526	64	92	120	550
14.56.080-4018	82	2700	630	190	230	145	650
14.56.080-4028	82	3700	830	190	230	145	850
15.56.080-4008	56	1200	426	150	185	120	450
15.56.080-4018	56	3700	830	190	230	145	850
15.56.080-4028	56	5500	830	300	340	145	850
16.56.080-4008	39	1700	430	190	230	145	450

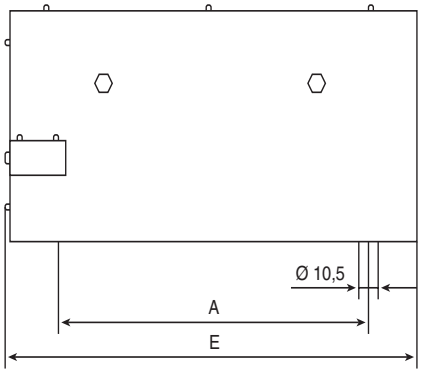

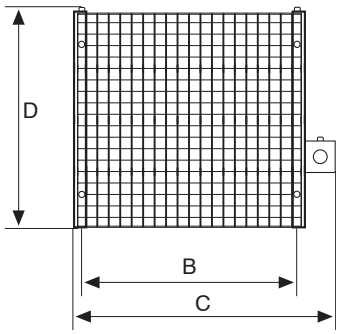

Part number	R_B [Ohm]	P_N [W]	A	B	C	D	E
16.58.080-4018	39	5000	380	370	430	260	490
16.56.080-4028	40	7500	380	570	630	260	490
18.56.080-4008	22	4000	380	370	430	260	490
18.56.080-4018	22	9000	380	570	630	260	490
18.56.080-4028	22	13500	380	770	830	260	490

10.1.4 Connection

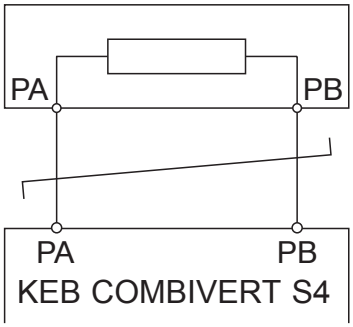

The external braking resistor is connected with the shortest possible line (twisted) to the terminals PA and PB.

GB

10.2 Submounted braking resistor

The submounting braking resistors are planned for a small volume installation directly under the frequency inverter. Mostly they are suitable for short braking cycles and clock system. The assemblies are made of:

- Braking resistor
- Temperature switch
- Submounted box
- Installation material

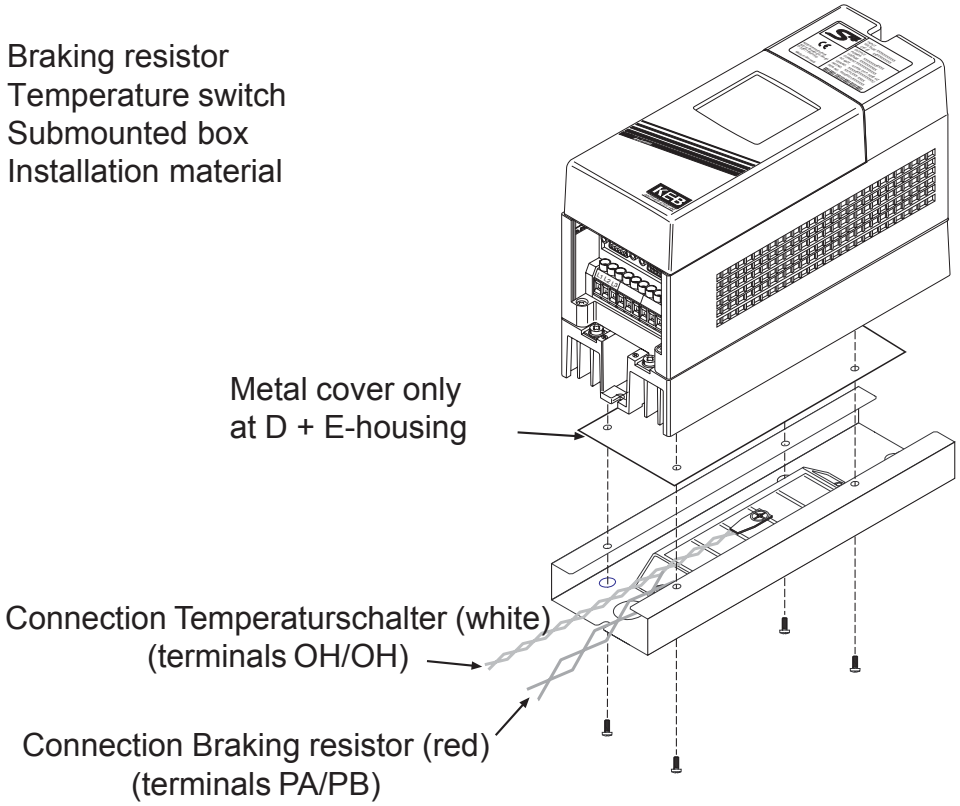

Size		03 / 05 / 07 / 10	12	16
Housing		D	E	G
Braking resistor	( )	82	60	25
Permanent load	[W]	35	60	2 x 80
Non-recurring load (max. 3s)	[W]	7800	9600	23000
Permissible load at 5 % ED	[W]	700	1200	3200
Permissible load at 10 % ED	[W]	350	600	1600
Permissible load at 20 % ED	[W]	175	300	800
Permissible load at 40 % ED	[W]	90	150	400
Weight	[kg]	0,9	1,3	1,9
Partnumber of the kit		12.F4.D50-4200	14.F4.E50-4200	16.F4.G50-4200

10.2.1 Dimensions

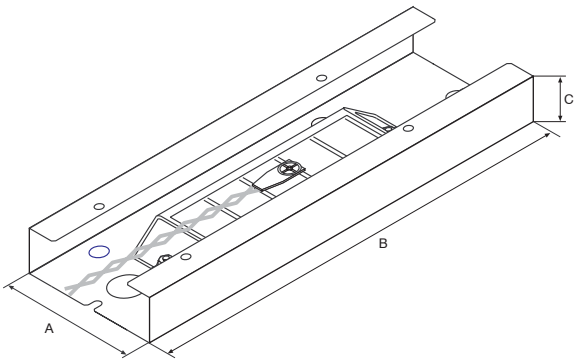

Housing [mm]	D	E	G
A	90	130	170
B	250	290	340
C	30	30	25

10.3 Radio Interference Suppression Filter

Optional the servo amplifier KEB COMBIVERT S4 is available with integrated radio interference suppression. Submounted filters are available for all unit sizes. The dimensions of the submounted filters are listed in Chapter „5 „Dimensions“.

10.3.1 Technical Data

Servo controller	**Part No.:** Filter-kit	**[A]** Rated current	**[mA]** Leakage current	**[V]** Rated voltage
03 (D-Housing)	09.E4.T60-0001	20	12	230
05 (D-Housing)	09.E4.T60-0001	20	12	230
07 (D-Housing)	10.E4.T60-1001	8	15	400
10 (D-Housing)	10.E4.T60-1001	8	15	400
12 (E-Housing)	14.E4.T60-1001	20	50	400
16 (G-Housing)	16.E4.T60-1001	50	50	400
18 (H-Housing)	18.E4.T60-1001	70	30	400

10.3.2 Connection

Connection 1-phase

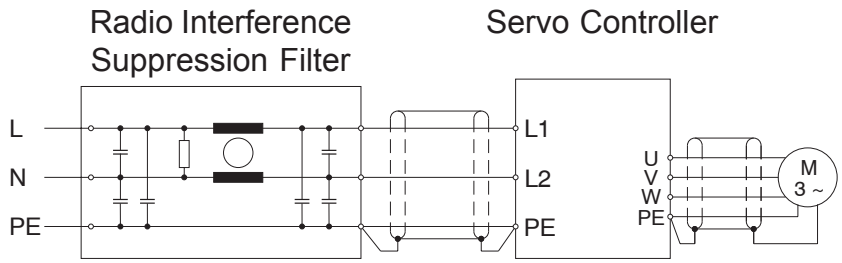

Connection 3-phase

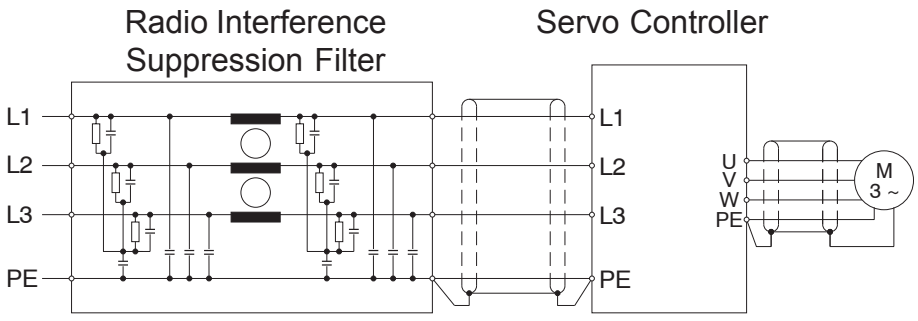

10.4 Operator

As an accessory to the local operation an operator is necessary. To prevent malfunctions, the Servo Controller must be brought into ***nOP*** status before connecting/disconnecting the operator (open control release terminal X2.1). When starting the Servo controller whitout an operator, it is started with the last stored values or factory setting. The operator is obtainable in different versions:

Digital-Operator
Part. No. 00.F4.010-2009

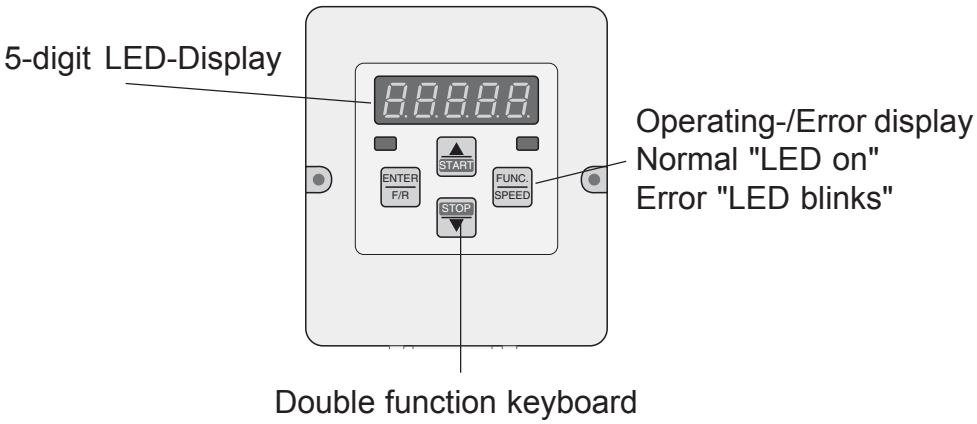

Interface-Operator
Part.-No. 00.F4.010-1009

In the Interface operator there is an additionally isolated RS232/RS485-Interface integrated. The RS232/485-parameterizing interface expands the KEB COMBIVERT S4 for communication with data communications equipment. Suitable wiring permits the physically isolated data transmission.



Servo controller
Parameterizing interface

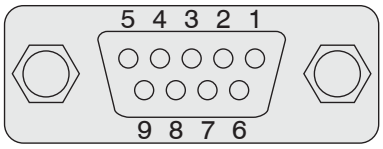

PIN No.	RS485 / Norm	Signal	Meaning
1	–	–	reserved
2	–	TxD	Transmit signal / RS232
3	–	RxD	Receive signal / RS232
4	A'	RxD-A	Receive signal A / RS485
5	B'	RxD-B	Receive signal B / RS485
6	–	VP	Supply voltage +5 V, I_{max} = 10 mA
7	C/C'	COM	Data reference potential
8	A	TxD-A	Transmit signal A / RS485
9	B	TxD-B	Transmit signal B / RS485

GB

11. Adjustment Assistance Speed Controller

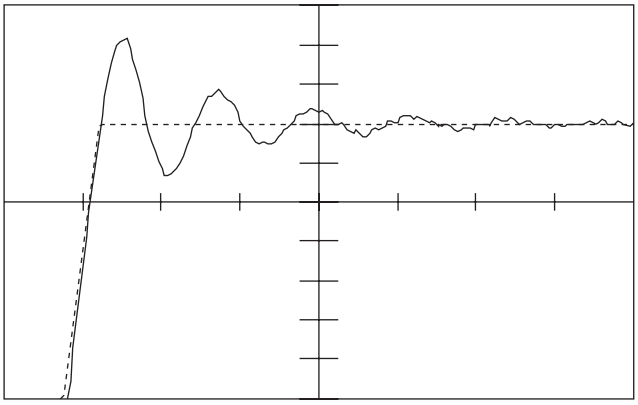

Problem: very long transient
Assistance: Increase P-component (CP.12); eventually reduce I-component (CP.13)

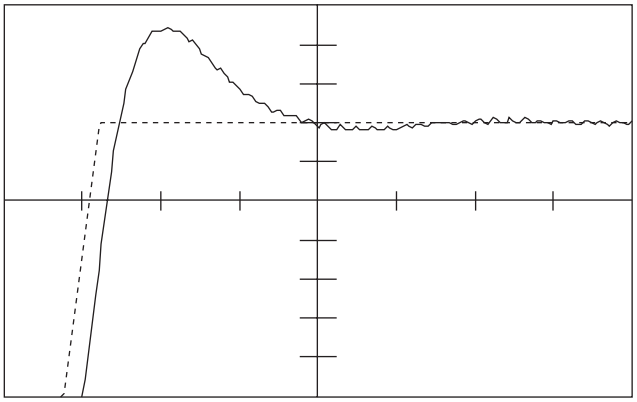

Problem: Speed overshoot too high
Assistance: Increase P-component (CP.12); eventually reduce I-component (CP.13)

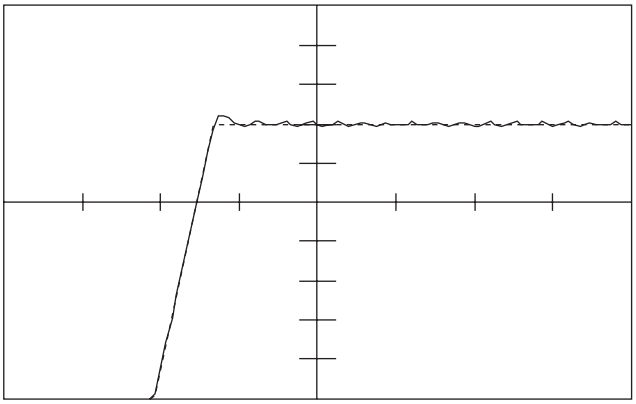

Problem: Maintained vibration

Assistance: Reduce P-component (CP.12)

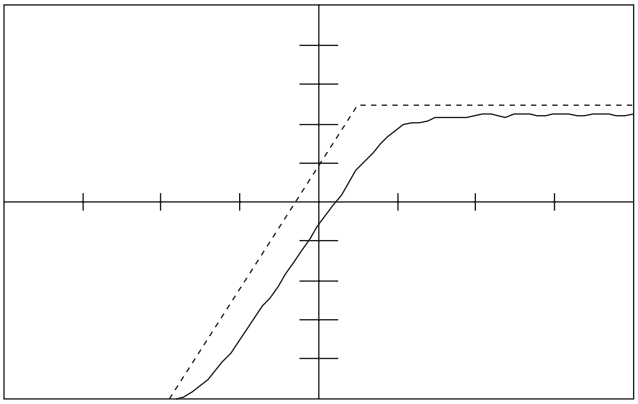

Problem: Transient too slow/ remaining control deviation
Assistance: Increase I-component (CP.13)

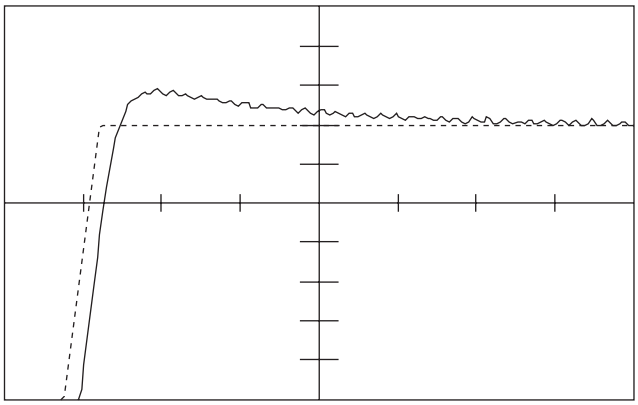

Problem: Overshoot too long

Assistance: Increase I-component (CP.13)

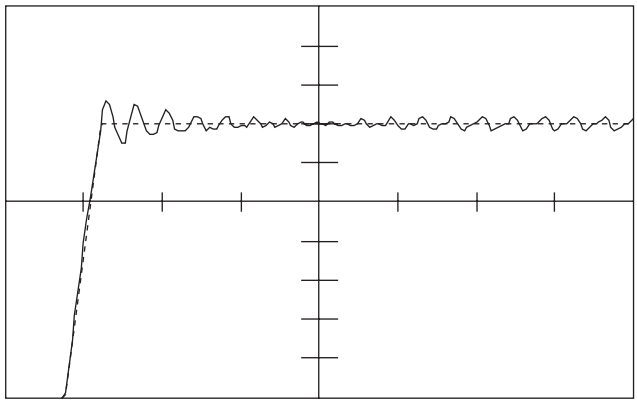

Problem: Maintained vibration with high amplitude
Assistance: Reduce I-component (CP.13)

GB

12. Error Diagnosis

Error messages are always represented by an „E“ and the corresponding error in the display of KEB COMBIVERT S4. In the following the displayed indications and their causes are described.

Undervoltage

Occurs when the DC-link voltage drops below the permissible value.
Causes:
- input voltage too low or instable
- inverter rating too low
- voltage losses through wrong wiring
- supply voltage from generator/transformer breaks down at very short ramps
- one phase of input voltage missing (ripple detection)

Overvoltage

Occurs when the DC-link voltage rises above the permissible value.
Causes:
- input voltage too high
- interference voltages at the input
- deceleration ramp too short
- braking resistor incorrectly connected
- braking module defective

Overcurrent

Occurs when the specified peak current is exceeded.
Causes:
- short circuit at the output
- ground fault
- motor cable too long
- EMC

Overload

Occurs when a too large load is applied longer than the permissible time allows (see Technical Data).
Causes:
- mechanical fault or overload in the application
- wrong dimensioned inverter
- wrong wired motor

Overheat

Occurs when the heat sink temperature rises above the permissible limit (see Technical Data).
Causes:
- insufficient cooling
- surrounding temperature too high
- ventilator clogged

ext. Overheat 	Occurs, when external temperature monitoring is triggered. Causes: - resistance at terminals OH/OH >1650 Ohm - motor overloaded - open circuit to temperature sensor
Load shunt error 	Load shunt not bridged, occurs for a short time during the switch on phase, but must be automatically reset immediately. If the error message remains, it may have following causes. - load shunt defect - input voltage wrong or too low - high losses in the supply line - wrong connected braking resistor - braking module defect
Set selection error 	**E**rror **SEt** occurs, when trying to select a locked parameter set.
Bus error 	**E**rror **buS**; for bus operation a monitoring time (Watchdog time ud.8) can be adjusted. The error is triggered when no telegrams are received within the the adjusted time.
External fault 	**E**rror **E**xternal **F**ault is triggered, when a digital input is being programmed as external error input (di. 3...di.10 = 6) and trips.
Power unit code 	**E**rror **P**ower **u**nit **C**ode invalid; during the initialization phase the power unit was not identified or detected as non-permissible.
Error brake 	Occurs when terminal F was not active at set direction clockwise or counter-clockwise (refer to di- and Pn-Parameter for terminal handling).
Error brake 	Occurs when terminal R was not active at set direction clockwise or counter-clockwise (refer to di- and Pn-Parameter for terminal handling).

GB

CPU-error 	Hardware error
Control card defect 	Hardware error
Software limit forward 	Occurs when a setpoint position outside the permissible range has been selected for the positioning (refer to Pc-Parameter).
Software limit reverse 	Occurs when a setpoint position outside the permissible range has been selected for the positioning (refer to Pc-Parameter).
Error incremental encoder 	Encoder not or wrong connected.
Overtemperature 2 	Occurs when the motor is overloaded and is triggered by the internal motor current monitoring. Function of an electrical motor protective relay. Help: – reduce the motor – reduce torque limit (Parameter CP.9)
Over speed 	**E**rror **O**ver **S**peed occurs when the actual speed is higher than the max.speed. Causes: – resolver not connected – wrong adjustment of the speed controller

13. Passwords

Customer "read only" Password	**100**
Customer "on" Password	**200**
Drive Password	**500**

Karl E. Brinkmann GmbH
Försterweg 36-38 • **D**-32683 Barntrup
fon: +49 5263 401-0 • fax: +49 5263 401-116
net: www.keb.de • mail: info@keb.de

KEB Antriebstechnik GmbH & Co. KG
Wildbacher Str. 5 • **D**–08289 Schneeberg
fon: +49 3772 67-0 • fax: +49 3772 67-281
mail: info@keb-combidrive.de

KEB Antriebstechnik Austria GmbH
Ritzstraße 8 • **A**-4614 Marchtrenk
fon: +43 7243 53586-0 • fax: +43 7243 53586-21
Kostelni 32/1226 • **CZ**-370 04 Ceské Budejovice
fon: +420 38 7319223 • fax: +420 38 7330697
mail: info@keb.at

KEB Antriebstechnik
Herenveld 2 • **B**-9500 Geraadsbergen
fon: +32 5443 7860 • fax: +32 5443 7898
mail: koen.detaeye@keb.de

KEB China
Xianxia Road 299 • **CHN**-200051 Shanghai
fon: +86 21 62350922 • fax: +86 21 62350015
net: www.keb-cn.com • mail: info@keb-cn.com

Société Française KEB
Z.I. de la Croix St. Nicolas • 14, rue Gustave Eiffel
F-94510 LA QUEUE EN BRIE
fon: +33 1 49620101 • fax: +33 1 45767495
mail: sfkeb.4@wanadoo.fr

KEB (UK) Ltd.
6 Chieftain Buisiness Park, Morris Close
Park Farm, Wellingborough **GB**-Northants, NN8 6 XF
fon: +44 1933 402220 • fax: +44 1933 400724
net: www.keb-uk.co.uk • mail: info@keb-uk.co.uk

KEB Italia S.r.l.
Via Newton, 2 • **I**-20019 Settimo Milanese (Milano)
fon: +39 02 33500782 • fax: +39 02 33500790
net: www.keb.it • mail: kebitalia@keb.it

KEB - YAMAKYU Ltd.
15–16, 2–Chome, Takanawa Minato-ku
J–Tokyo 108-0074
fon: +81 33 445-8515 • fax: +81 33 445-8215
mail: kebjt001@d4.dion.ne.jp

KEB Antriebstechnik
Leidsevaart 126 • **NL**–2013 HD Haarlem
fon: +31 23 5320049 • fax: +31 23 5322260
mobil: +31 653964667
mail: vb.nederland@keb.de

KEB Portugal
Lugar de Salgueiros – Pavilhao A, Mouquim
P-4760 V. N. de Famalicao
fon: +351 252 371318 • fax: +351 252 371320
mail: keb.portugal@netc.pt

KEB Taiwan Ltd.
No.8, Lane 89, Sec.3; Taichung Kang Rd.
R.O.C.-Taichung City / Taiwan
fon: +886 4 23506488 • fax: +886 4 23501403
mail: keb_taiwan@mail.apol.com.tw

KEB Sverige
Box 265, Bergavägen 19
S-430 93 Hälsö
fon: +46 31 961520 • fax: +46 31 961124
mail: thomas.crona@keb.de

KEBCO Inc.
1335 Mendota Heights Road
USA-Mendota Heights, MN 55120
fon: +1 651 4546162 • fax: +1 651 4546198
net: www.kebco.com • mail: info@kebco.com

© KEB 00.S4.01B-K141 1/2004